 


1/10遥控四驱门桥仿真攀爬车YK41012 说明书

1/10 SCALE RC ROCK CRAWLER 4WD YK41012 INSTRUCTION MANUAL

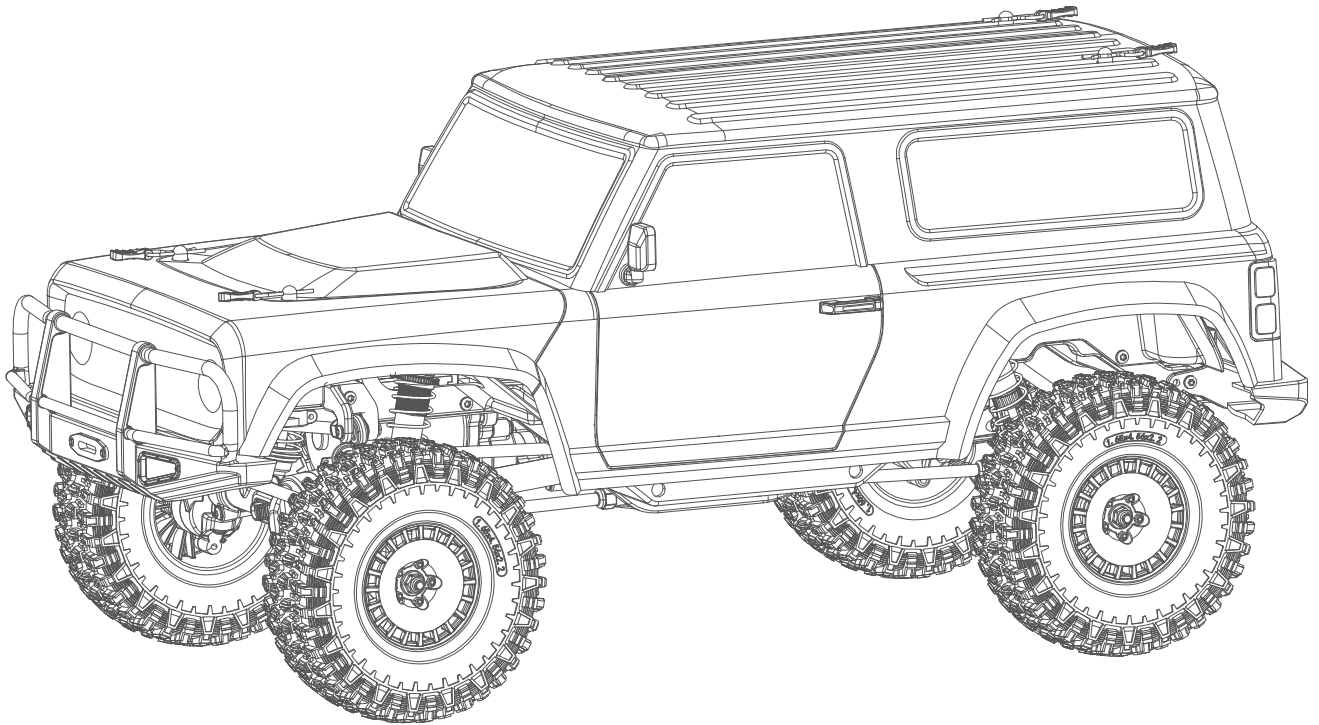

感谢您购买我们的产品！祝您玩得开心，为了获得最佳产品性能体验，请在使用前务必认真阅读说明书。

Thank you for your purchasing. Before operating this vehicle, please read manual materials thoroughly. This manual contains all the necessary set-up and operating procedures that allow you to unlock the performance.

| | |
|-----------------|-------|
| 目录 | 01 |
| 操作说明和注意事项 | 02~06 |
| 爆炸图 | 07~18 |
| 配件表 | 19~24 |

| | |
|------------------------------------|-------|
| Table of Contents | 01 |
| Instructions and Precautions | 02~06 |
| Explode Diagram | 07~18 |
| Parts List | 19~24 |

安全注意事项

SAFETY PRECAUTIONS AND WARNINGS

年龄建议：不适合14岁以下儿童。这不是玩具。

Age Recommendation: Not for children under 14 years. This is not a toy.

- 1) 严禁在公共场所或拥挤的地方操作模型车, 本产品不允许儿童在没有成人直接监督下使用。
Never operate the model in public places and the street or in populated areas for any reason. This product is not intended for use by children without direct adult supervision.
- 2) 严禁反接电池或拆解电池, 这是危险的, 并可能引起火灾。
Never reverse install the battery or disassemble the battery, which is dangerous and may cause a fire.
- 3) 本产品包含细小且锋利的零件, 请将任何化学品、小零件和电子设备放在儿童接触不到的地方。
This product contains small and sharp parts, keep all chemicals, small parts and anything electrical out of the reach of children.
- 4) 当不使用模型车时, 请先断开电源并把电池从车身移出。此外遥控器电源关闭后, 应取出电池以免漏液。
When not use the vehicle, power OFF the vehicle and then the transmitter. Unplug the battery and remove it from the vehicle. Also remove the transmitter battery to avoid leakage.
- 5) 请不要混用新旧或不同类型电池。
Please do not mix old and new batteries or different types of batteries.
- 6) 不要在遥控器电池电量低的情况下操作车子, 如果电池电量过低, 请更换电池。
Never operate your model with low transmitter batteries. Replace batteries when vehicle batteries are low.
- 7) 在开机状态下, 切勿拆卸遥控器电池。
Never remove the transmitter batteries while the model is powered ON.
- 8) 请根据当地有关规定, 妥善弃置或回收电池。
Dispose of used batteries according to national regulations.
- 9) 充电时, 请从模型车中取出电池, 如果电池变形, 请不要使用。
When charging the battery, please take out the battery from the vehicle. If the battery is deformed, please do not use it.
- 10) 电池应在成人监督下充电, 无人看管时请勿给电池充电。
The battery should be charged under adult supervision, do not charge the battery when unattended.
- 11) 遥控系统有各种不同功能和设置, 初次接触前请确保对所有功能设置完全理解, 未能正确操作可能导致产品损坏。
The radio system has different functions and settings, please read the entire manual to gain a full understanding of functions, failure to operate correctly could result in product malfunction and damage.


产品规格参数

PRODUCT SPECIFICATION:

| | |
|------------------------|----------|
| 车长Length: | 518mm |
| 车宽Width: | 251mm |
| 车高Height : | 235mm |
| 轮胎Tire Diameter/Width: | 116/42mm |
| 轴距Wheelbase: | 315mm |
| 车重 Product Weight: | 2.50KG |
| 电池仓尺寸Battery Box Size: | 156*48mm |
| 接近角Approach: | 55° |
| 离去角Departure: | 52° |
| 转向角度Steering angle: | 40° |
| 离地间隙Ground clearance: | 60mm |


| 马达齿 Pinion Gear | 低速齿轮比 Low speed Gear Ratio | 高速齿轮比 Low speed Gear Ratio |
|--------------------|-------------------------------|-------------------------------|
| 12T | 81.95 | 35.20 |
| 13T | 75.70 | 32.50 |
| 14T | 70.30 | 30.20 |
| 15T | 65.60 | 28.20 |
| | | |
| | | |

 遥控器和电调功能介绍 TRANSMITTER and ESC FUNCTIONS

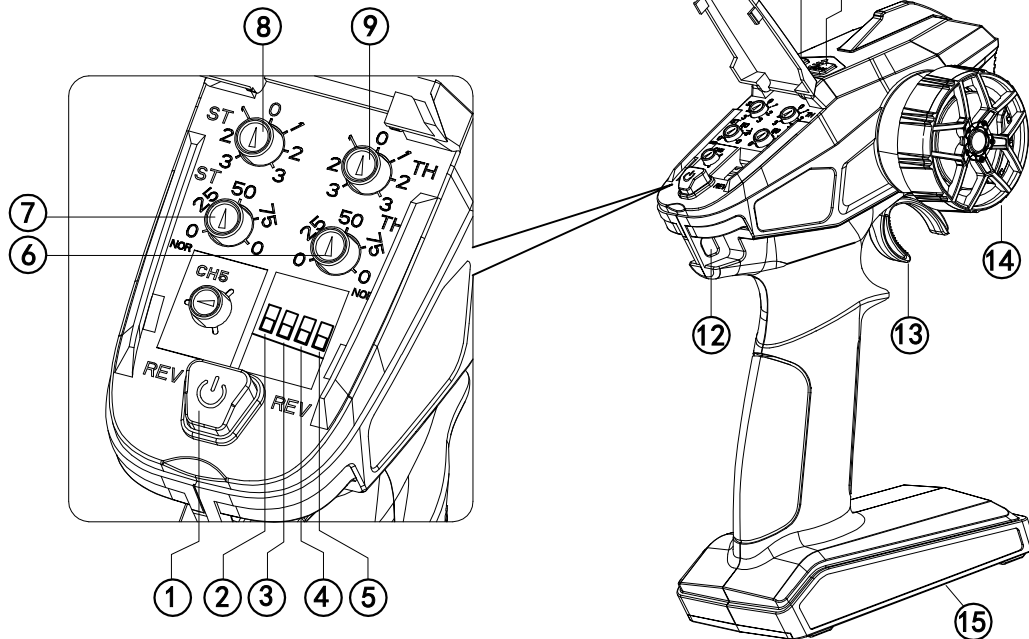


- | | | | |
|-----------------------------------|-----------------------------------|-------------------------|---|
| 1) 电源开关 Power Button | 5) 4通正反切换开关 CH4 Reverse Switch | 9) 油门中位微调 TH Trim | 13) 油门/刹车扳手 (2通) Throttle/Brake Trigger(CH2) |
| 2) 1通正反切换开关 CH1 Reverse Switch | 6) 油门舵量旋钮 EPA for Throttle | 10) 第3通道 Channel 3 | 14) 转向轮 (1通) Steering Wheel (CH1) |
| 3) 2通正反切换开关 CH2 Reverse Switch | 7) 转向舵量旋钮 EPA for Steering | 11) 第4通道 Channel 4 | 15) 电池仓 Battery Installation |
| 4) 3通正反切换开关 CH3 Reverse Switch | 8) 转向中位微调 ST Trim | 12) 挂绳孔 Lanyard hole | |

 遥控器电池安装 INSTALLING THE TRANSMITTER BATTERIES

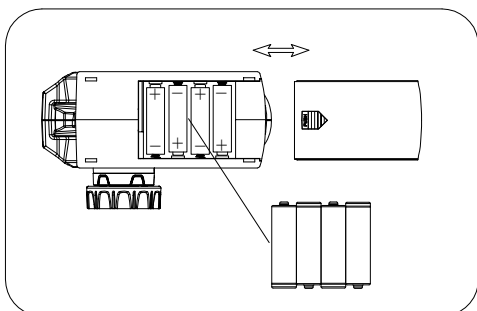

- 按箭头方向滑动，拆下或者安装发射机电池盖。
Remove the battery cover from the transmitter (Slide cover as shown arrow direction)
- 装4颗电量充足的AA电池，注意电池尺寸正负极如图所示，不要装反。
Install 4 AA batteries with sufficient power as shown. Taking care to align the battery polarity.
- 不要混用新旧或不同类型的电池。更换电池型号不正确，或给非充电电池充电有爆炸危险。
Never use different batteries or mixed old and new batteries. Risk of explosion if battery is replaced by an incorrect type or charging non-rechargeable batteries.
- 定期检查遥控器上电池电量。电池电量不足情况下，不能操作车子，信号会遭受影响，车子可能瞬间失控，导致发生碰撞或伤害。长时间不使用时，请将电池从遥控器内取出。
Check the transmitter battery level regularly. Never operate your model with low transmitter batteries, the radio signal may subject to interference and cause momentary loss of control and collisions or injury. When not in use for a long time, please remove the battery from the transmitter.

 电调设置说明 ESC Instructions

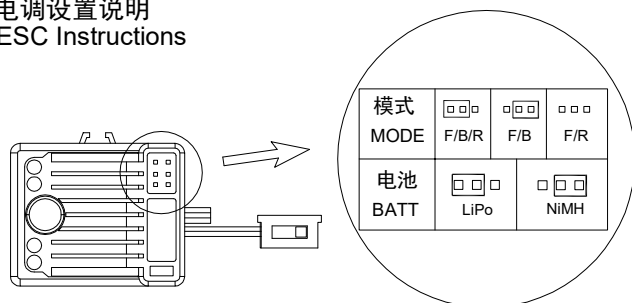

- F/B/R: 前进/刹车/后退模式
F/B/R: Forward/Brake/Reverse
F/B: 前进/刹车模式
F/B: Forward/Brake
F/R: 前进/后退模式(攀爬模式)
F/R: Forward/Reverse(Crawler mode)


如图所示，电调跳线帽插入不同的位置，调整电调的模式和电池的类型，每次插好后需关掉电调重启生效。

As the image shown, Jumper locations : to change the ESC mode and Battery(LiPo or NiMH). Kindly note restart the ESC to save the setting


电子设备的连接 ELECTRONICS CONNECTION

出厂前所有电子设备均已连接好
第1通道连接15KG舵机控制转向
第2通道连接电调控制动力马达工作
第4通道连接17G舵机控制高低速换挡
注意电池，马达的连接，黑色负极，红色正极。

 
Before leaving the factory, all electronic devices are pre-connected:
Channel 1: 15KG servo motor for steering control.
Channel 2: ESC for power motor operation control.
Channel 4: 17G servo motor for high-low speed shifting control.
Note the battery and motor connections, with black indicating negative and red indicating positive.

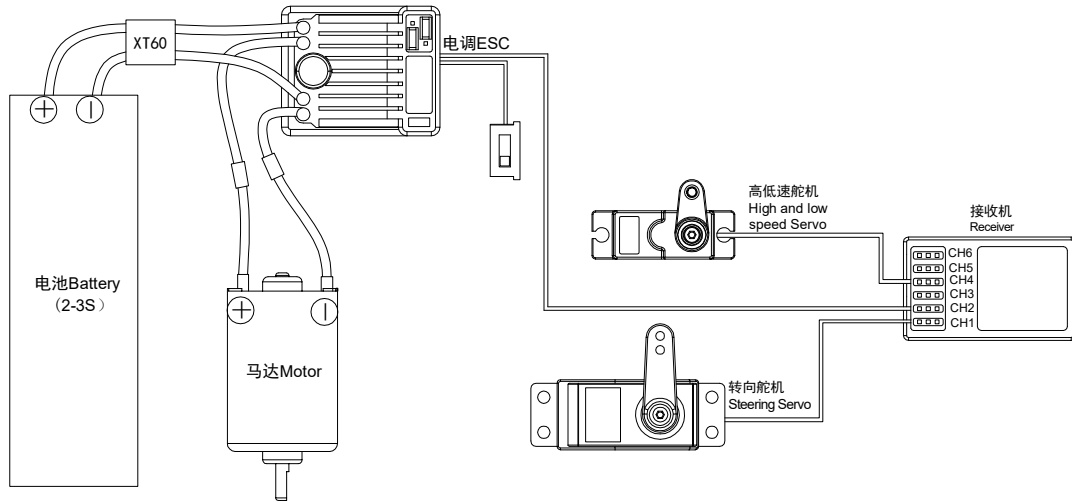


操作模型车 DRIVING PRECAUTIONS

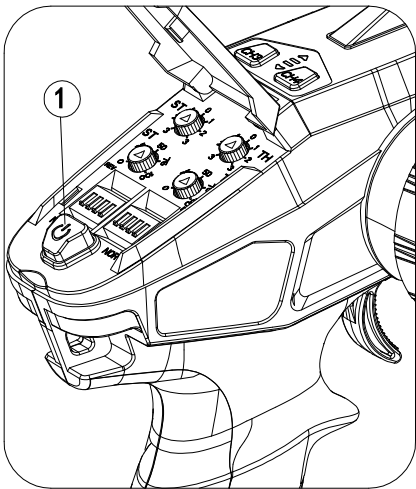 

 
1. 打开遥控器电源开关，遥控器电源指示灯点亮。
Power ON the transmitter, the battery Indicator lights.
2. 打开电调电源开关，电调指示灯点亮，控制系统进入工作状态。
Turn on ESC Power Switch, the LED Lights, indicating control system enters working status.

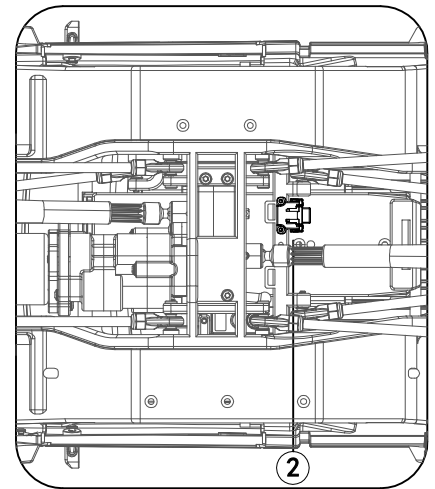

操作模型车 DRIVING PRECAUTIONS

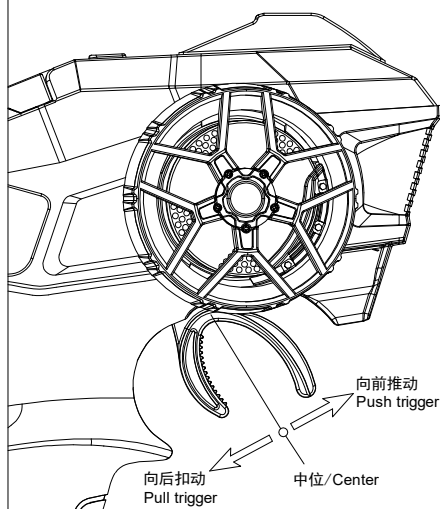 

Forward
前进

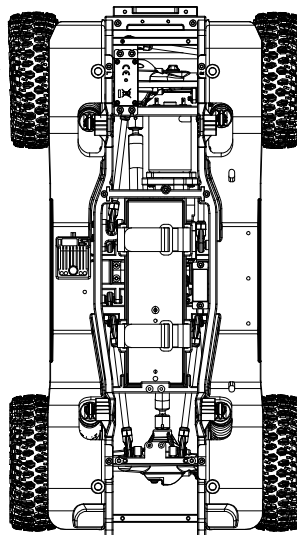 

Backward
后退

用手指向后扣动遥控器扳机，车将向前行驶。
用手指向前推动扳机一次为刹车，松开手指待扳机回到中位后再向前推动则为倒车。

To move the vehicle forward, pull the Throttle trigger .

 
 
 
To reverse the vehicle, push the transmitter trigger one time is brake, pause, then return the trigger to center. Push again is Reverse.

操作模型车


DRIVING PRECAUTIONS

车前轮的运动是随遥控器转向轮的调整而改变的。
 遥控器转向轮向左转，车前轮也是左转。
 遥控器转向轮向右转，车前轮也是右转。

The front wheel movement is controlled by transmitter steering wheel.
 Turn transmitter steering wheel left, the vehicle front wheels turns left.
 Turn transmitter steering wheel right, the vehicle front wheels turns right.

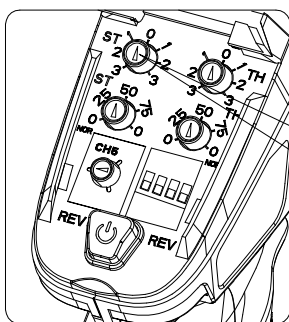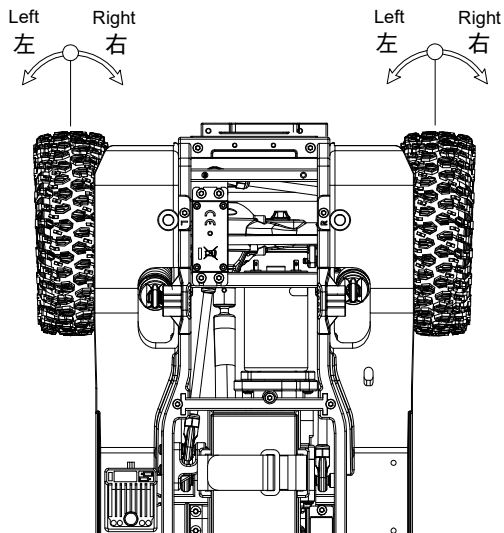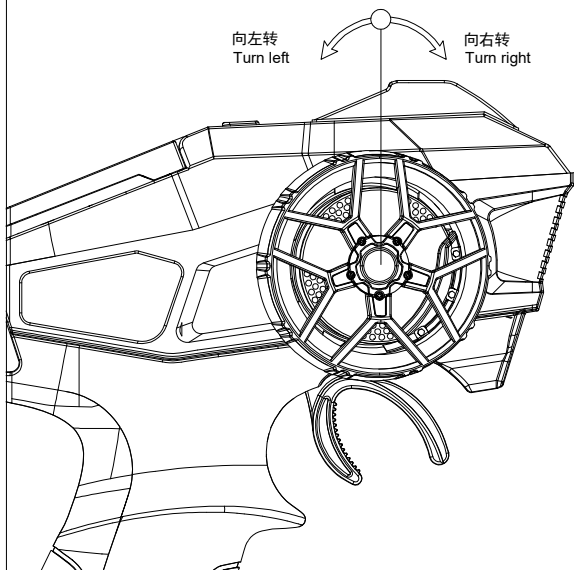


转向中位微调
Steering trim

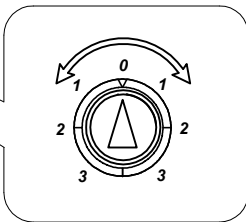 


在没有操控转向轮的情况下，车辆前轮应该处于中心位置。
 如果前轮偏向左侧，请顺时针转动转向微调旋钮进行微调。
 如果前轮偏向右侧，请逆时针转动转向微调旋钮进行微调。

 Without turning transmitter steering, the vehicle front wheels should maintain a straight line. If not, adjust ST Trim knob until the vehicle tracks straight. If the front wheel is tilted to the left, fine tuning ST Trim knob clockwise. If the front wheel is tilted to the right, fine tuning ST Trim knob counterclockwise.

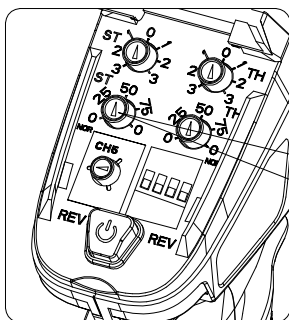


 转向角度舵量调整旋钮
Steering End Point Adjustment

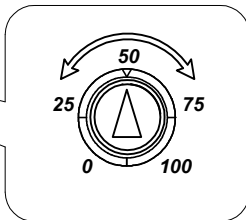


调整转向角度舵量大小，来适应不同弯角路面的行使需要。
 顺时针转动该微调旋钮，可以将转向角度调整到最大。
 逆时针转动该微调旋钮，可以将转向角度调整到最小。

 Adjust Steering End Point to help adapt to different terrains. Clockwise twist this knob: adjust to the maximum steering angles. Counterclockwise twist this knob: adjust to the minimum steering angles.

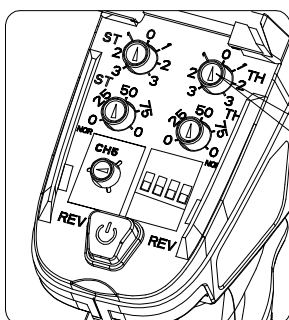


油门中位微调
Throttle Trim

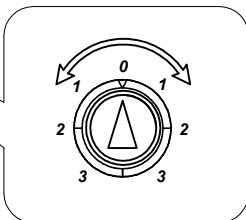 


在没有操控油门扳机的情况下，车辆应该处于静止状态。
 如果车子自行前进，请逆时针转动油门中位微调旋钮进行微调。
 如果车子自行后退，请顺时针转动油门中位微调旋钮进行微调。

 Without operating throttle trigger, the vehicle should be motionless. If vehicle moves forward, counterclockwise adjust Throttle Trim knob. If vehicle moves backward, clockwise adjust Throttle Trim knob.

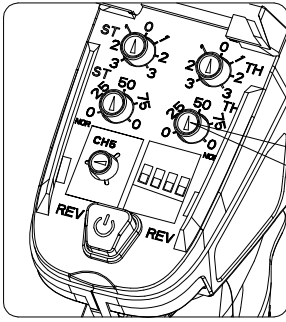


油门限速旋钮
Throttle Limit

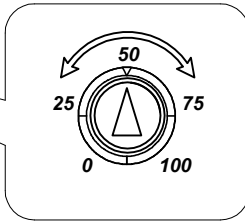 


设定遥控油门限速旋钮控制量大小，逆时针旋转是降低控制量（最低可以降到0%），顺时针旋转是加大控制量（最高值为100%正常油门控制量）。对于初学者而言，可以先尝试调低油门控制量来适应车辆。

 Set Throttle Limit knob to limits throttle output. Counterclockwise Throttle Limit knob to reduce the limit output(minimum 0%) Clockwise adjust Throttle Limit knob to increase the limit output(maximum 100% is for normal) Suggest the less experienced select Throttle Limit to reduce speed.

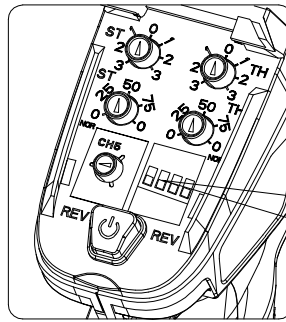

正反切换开关
Reverse switch

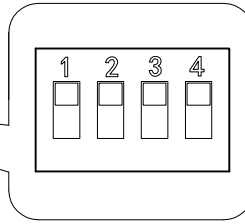 

如果遥控的操作与车辆动作不一致，请调整此正反切换开关，直至遥控操作和车辆动作一致。

If the operation on transmitter is inconsistent with the vehicle actual performs (forward/backward, left/right) , please adjust this switch to correct.

常见问题及故障处理 Troubleshooting

| | 故障现象 Problems | 故障分析 Causes | 故障排除 Solutions |
|--------------------|---|---|--|
| 遥控器 Transmitter | 电源指示灯不亮 LED does not work. | 电池没电或电池安装错误 Weak batteries or batteries are not installed properly. | 更换新的电池或检查正负极 Replace with new batteries or install them correctly. |
| | 电源指示灯频率式慢闪 LED flashes slowly. | 电池电量不足 Low battery power. | 更换新的电池 Replace with new batteries. |
| | 指示灯正常亮起，但是无功能，无法操控车辆 Switch on, normal LED indicate, but no function and cannot operate vehicle. | 周围可能有其它正在运行的电子产品导致的遥控频率干扰 Signal interference with other transmitters around you. | 重启模型车和遥控器或更换场地 Switch off firstly, and then switch on again or change to other places. |
| 模型车 Car | 接通电源后指示灯不亮 Connected, but fail to be switched on. | 电池没电或电池过放而损坏，或电路接线破损 The battery pack is flat or damaged. The connectors and wires may break. | 更换为已充电的电池，检查电池或线路是否损坏 Charge the battery pack and replace with the new battery pack when needed, check all wires and connectors. |
| | 转向异常或失灵 Connected, but fail to be switched on. | 检查是否有杂物阻塞转向结构，或转向部件或舵机已损坏 Steering device is jammed or steering servo is damaged. | 检查所有部件，更换损坏的或磨损的部件 Check all the steering parts and or steering servo. Fix or replace with new parts if needed. |
| | 能转向，但无法前进或后退 Steering functions, but the car is not able to go forwards or backwards. | 电池电力不足， The battery pack is flat. 传动部件损坏或被杂物阻塞。 Damaged or clogged parts in drive train . 电调功能异常 ESC malfunctions. | 更换为已充电电池， Charge the battery pack. 清理与更换部件。 Clean, fix and replace with new parts. 更换电调 Replace with new ESC. |
| | 模型车行驶时噪音大 The car drives noisily. | 检查是否有杂物阻塞传动部件，或传动部件损坏或脱落，检查齿轮啮合度，检查并分析差速器齿轮是否已出现扫齿、崩牙等现象。 Check if the drive train is tight or blocked or damaged driving parts, Check the gear mesh and check if the diff. is damaged or not. | 及时更换已损坏的齿轮、传动轴、传动接杯或差器 Replace with new gears, diff. driveshafts, outdrive cups in the event that they are damaged. Do not use the car until it has been repaired |

维修服务


REPAIR SERVICE:

 
- 1) 车辆需要经常保养，以保持其性能，特别是活动的零件部位，每次玩车后及时清除上面的尘土杂物，保持车辆清洁和良好的保养。
Periodic maintenance in order to ensure the vehicle best performance, especially the running parts. Remove chassis free of dirt and debris after every driving. Keep your vehicle clean and well maintained.
- 2) 定期检查车上有螺丝的地方，有必要就拧紧加固。
Regularly check the screws on the car and tighten them if necessary.
- 3) 经常检查车上面磨损/弯曲/坏掉的部件，有必要就换掉。
Always check for wear/broken/bent parts, and replace it if necessary.
- 4) 所有的零件都可以作为散件在爆炸图上找到编号，有损坏可以在零售商订购更换。有任何问题，都可以在零售商寻求帮助。
All parts listed on the exploded view. Damages can be ordered at the retailer. If you have any questions, you can ask for help at the retailer.


Differential Gear Assembly





差速器组 前/后



 × 8
 21145
 平头 2.5×8
 FH HEX Screw


 × 2
 21122
 BB12×18×4

 
 × 2
 21123
 BB15×21×4

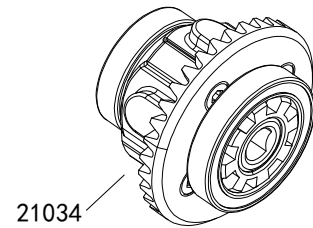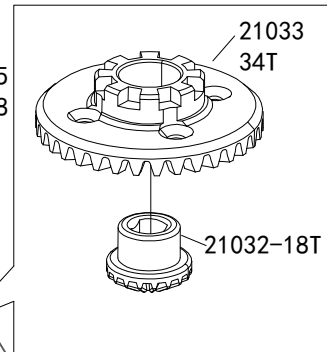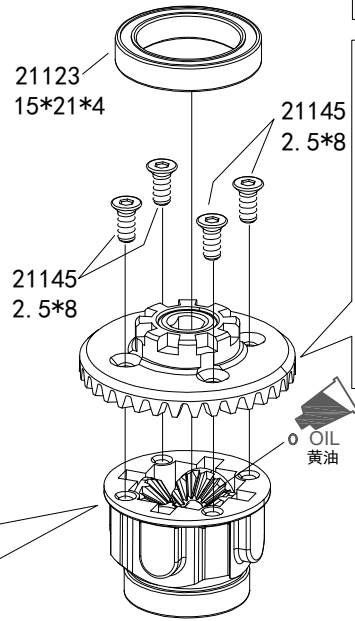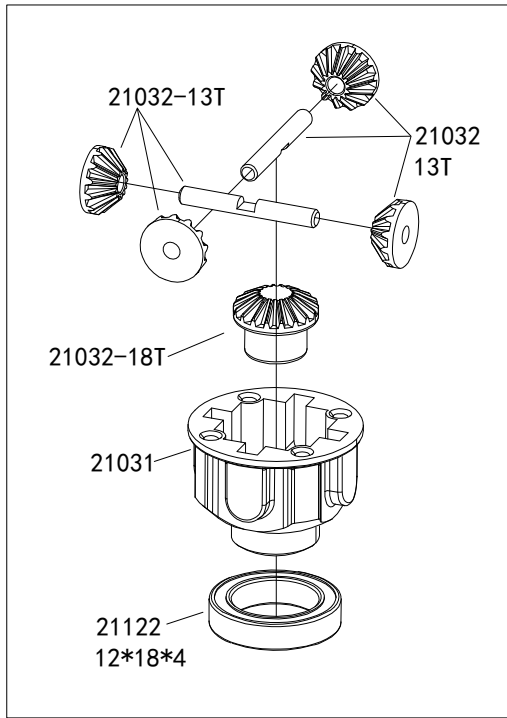    



Spindle set

转向臂组 左/右

 × 4
 21120
 BB 5×11×4


 
 × 4
 21121
 BB 6×12×4

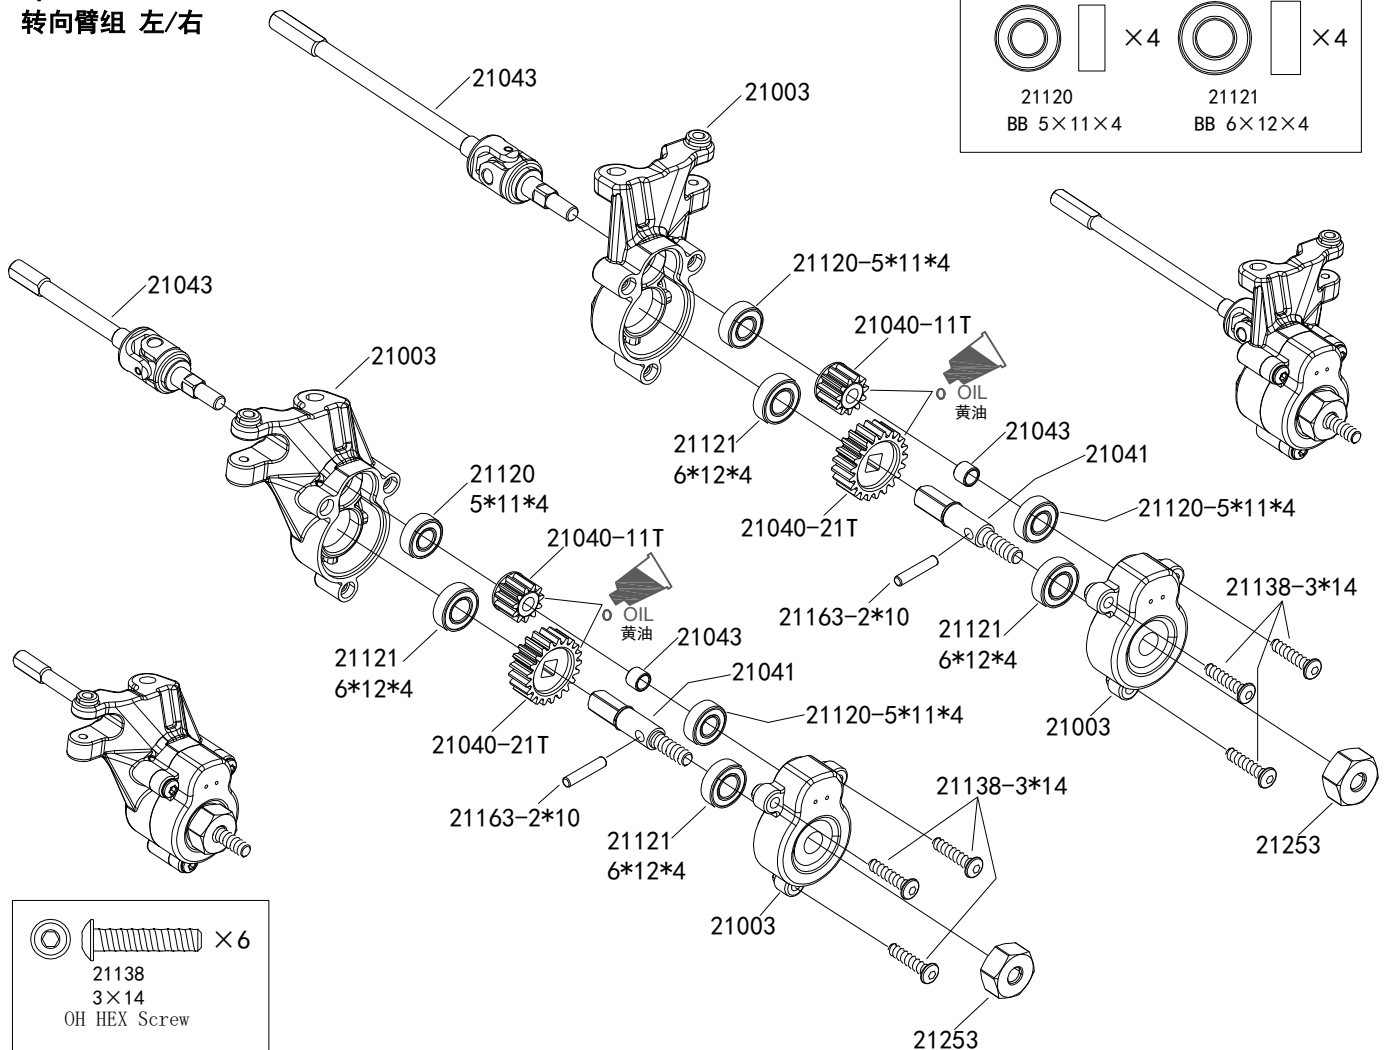

 × 6
 21138
 3×14
 OH HEX Screw



Front portal Assembly

  前桥组

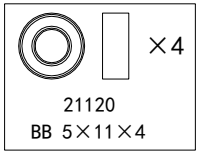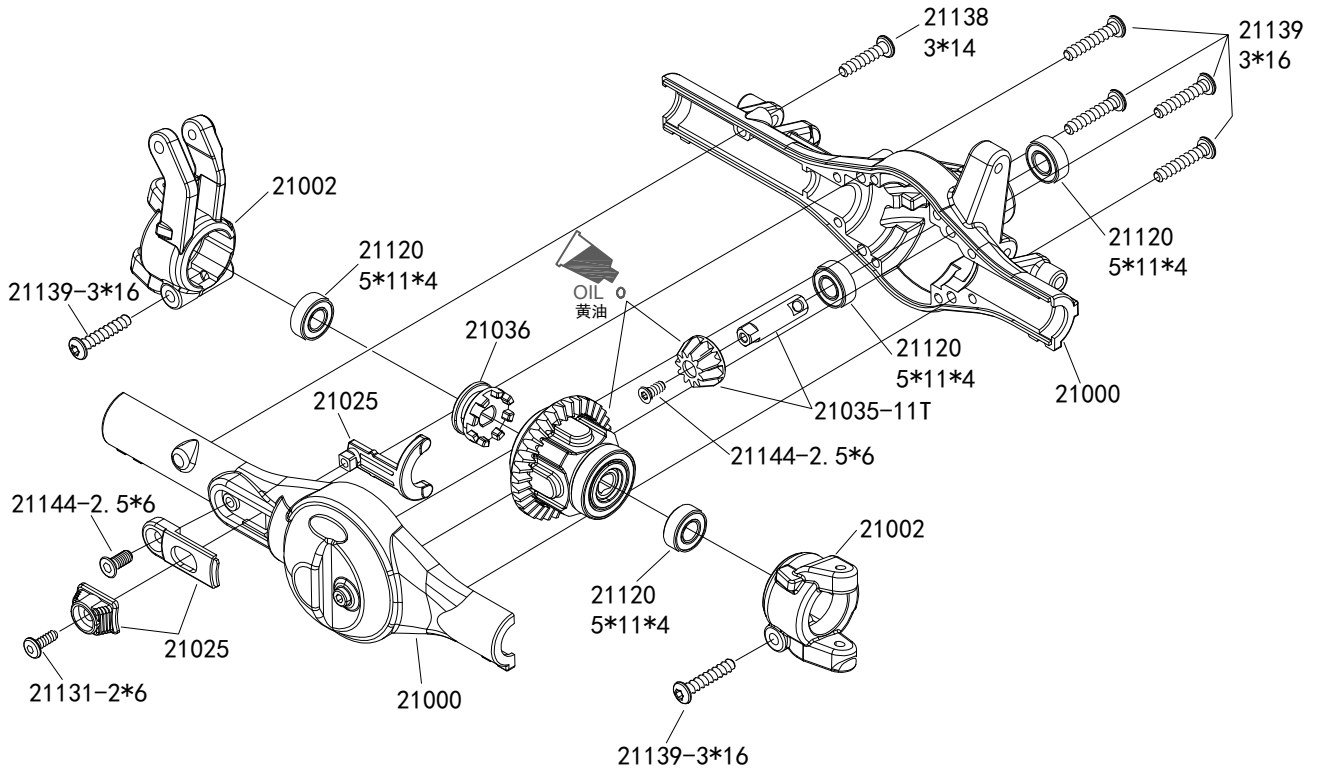



Front portal Assembly

  前桥组

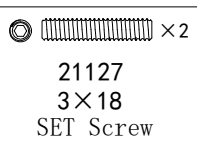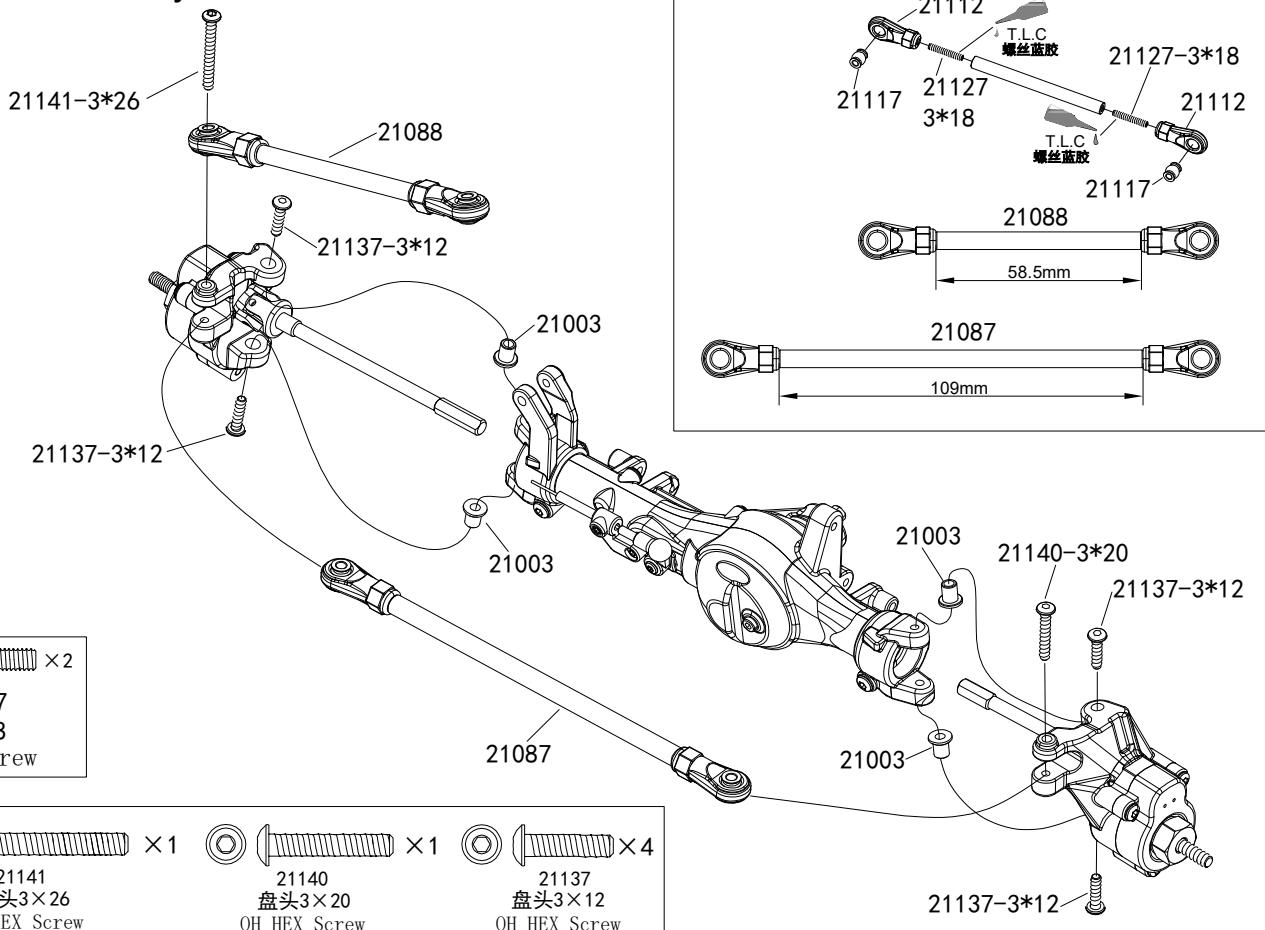




Rear portal Assembly

  后桥组

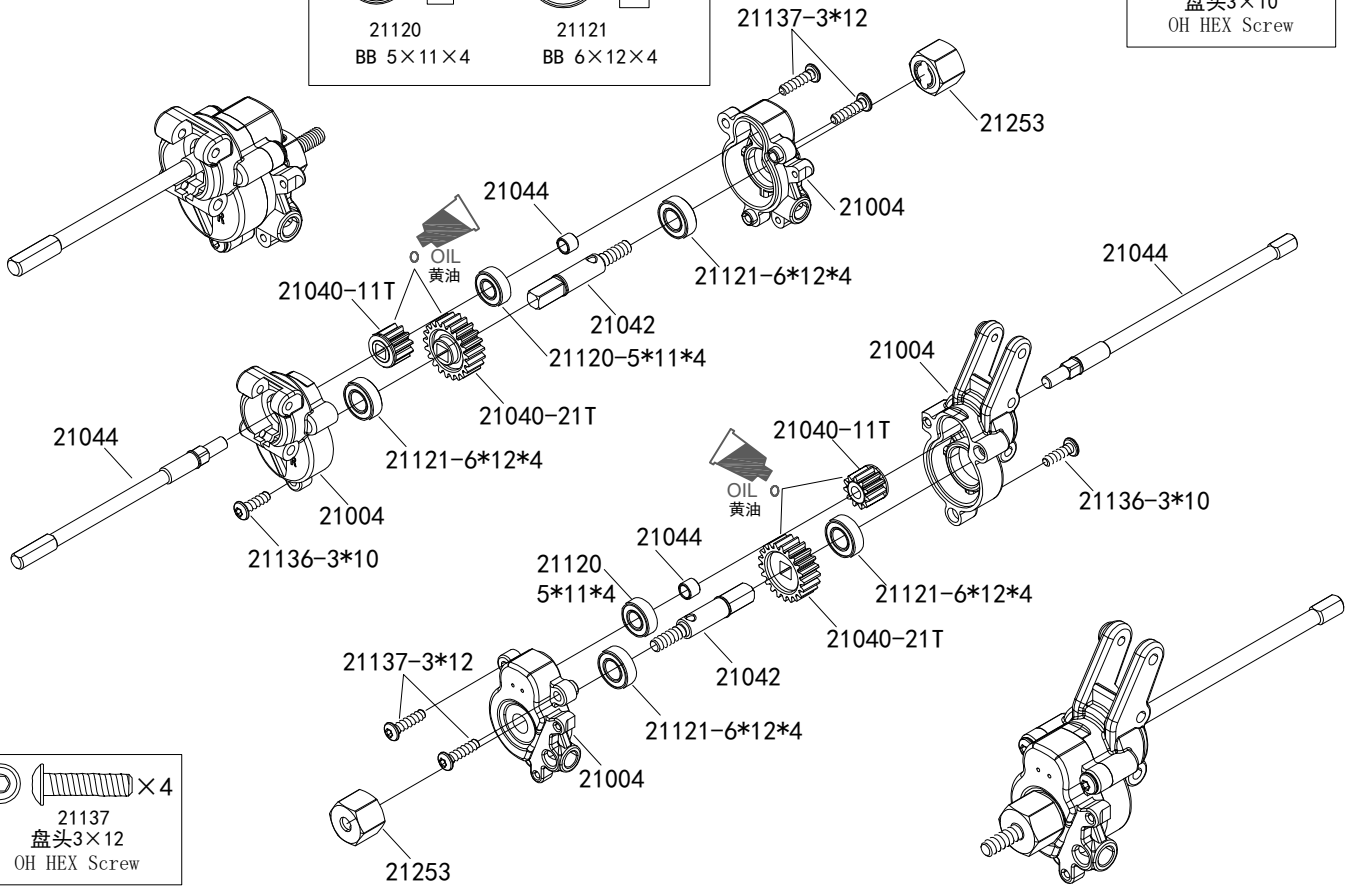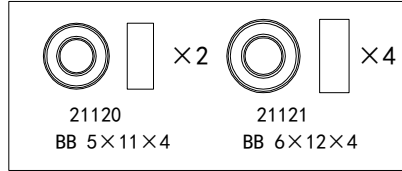


Rear portal Assembly

   
后桥组

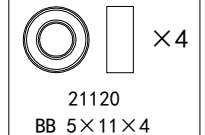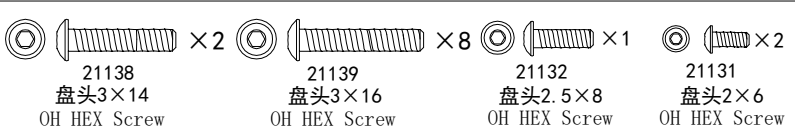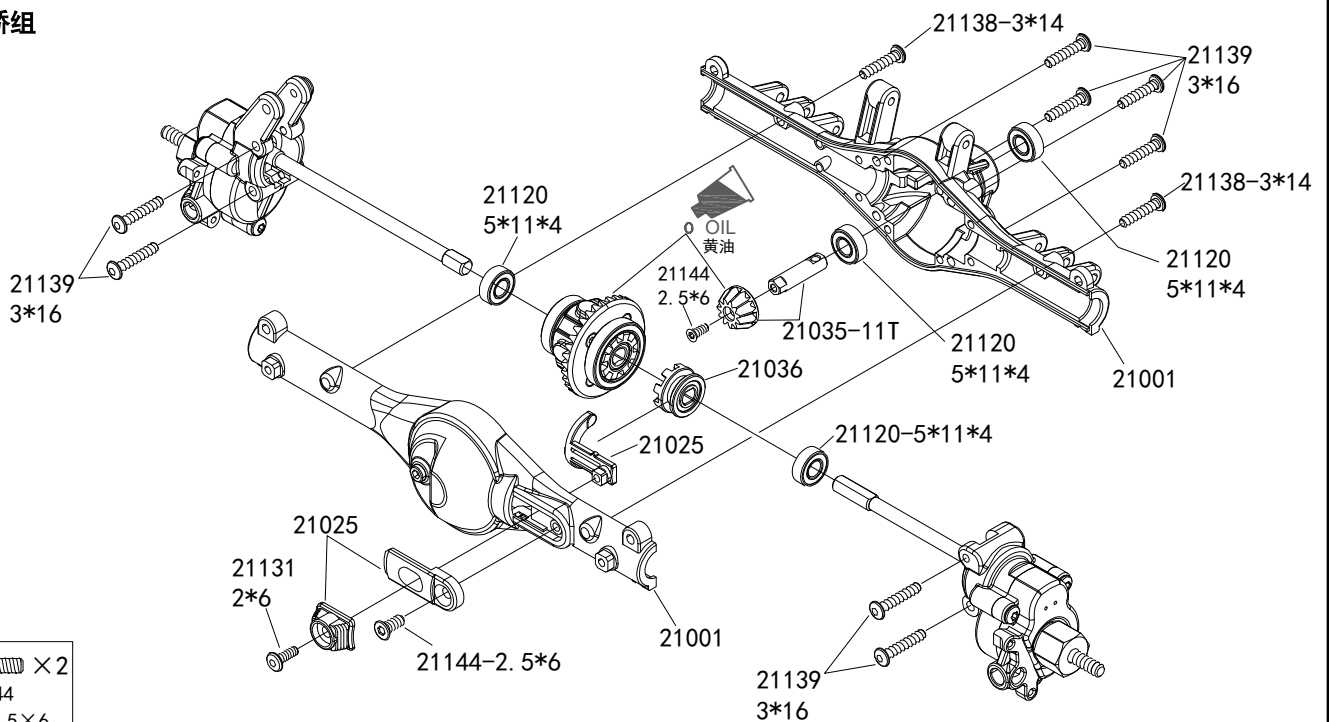



Rear portal assembly linkage shock installation


后桥组拉杆、避震器安装


 × 3
 21139
 盘头3×16
 OH HEX Screw


 × 2
 21141
 盘头3×26
 OH HEX Screw

 
 × 10
 21127
 3×18
 SET Screw

 21112
 T.L.C
 螺丝蓝胶
 21127-3×18
 21116
 21127
 3×18
 T.L.C
 螺丝蓝胶
 21116

 21264
 68mm
 上拉杆Camber Link


 21265
 81mm
 下拉杆Linkage upper


 21084
 90mm
 止推杆Sway Bar

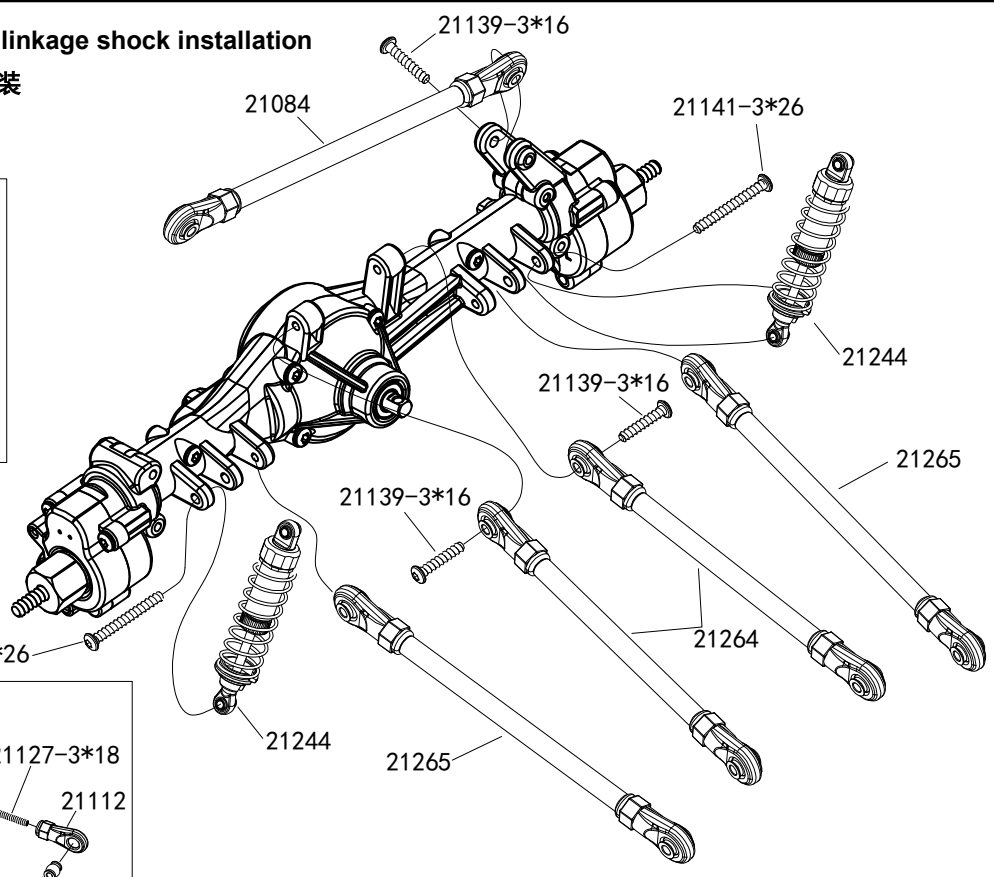


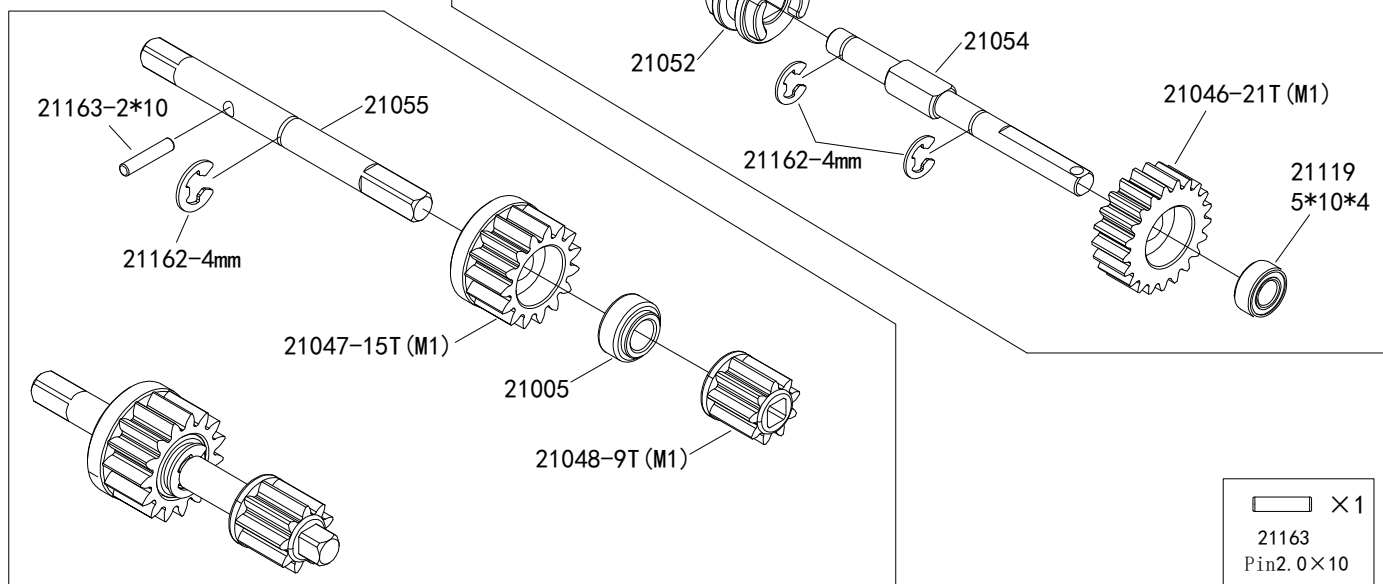 
Gearbox Assembly


波箱组

 × 1
 21161
 3.0E扣
 E-CLIP

 × 3
 21162
 4.0E扣
 E-CLIP



 × 2
 21119
 BB 5×10×4

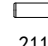

 × 1
 21163
 Pin2.0×10



Gearbox Assembly

  波箱组装

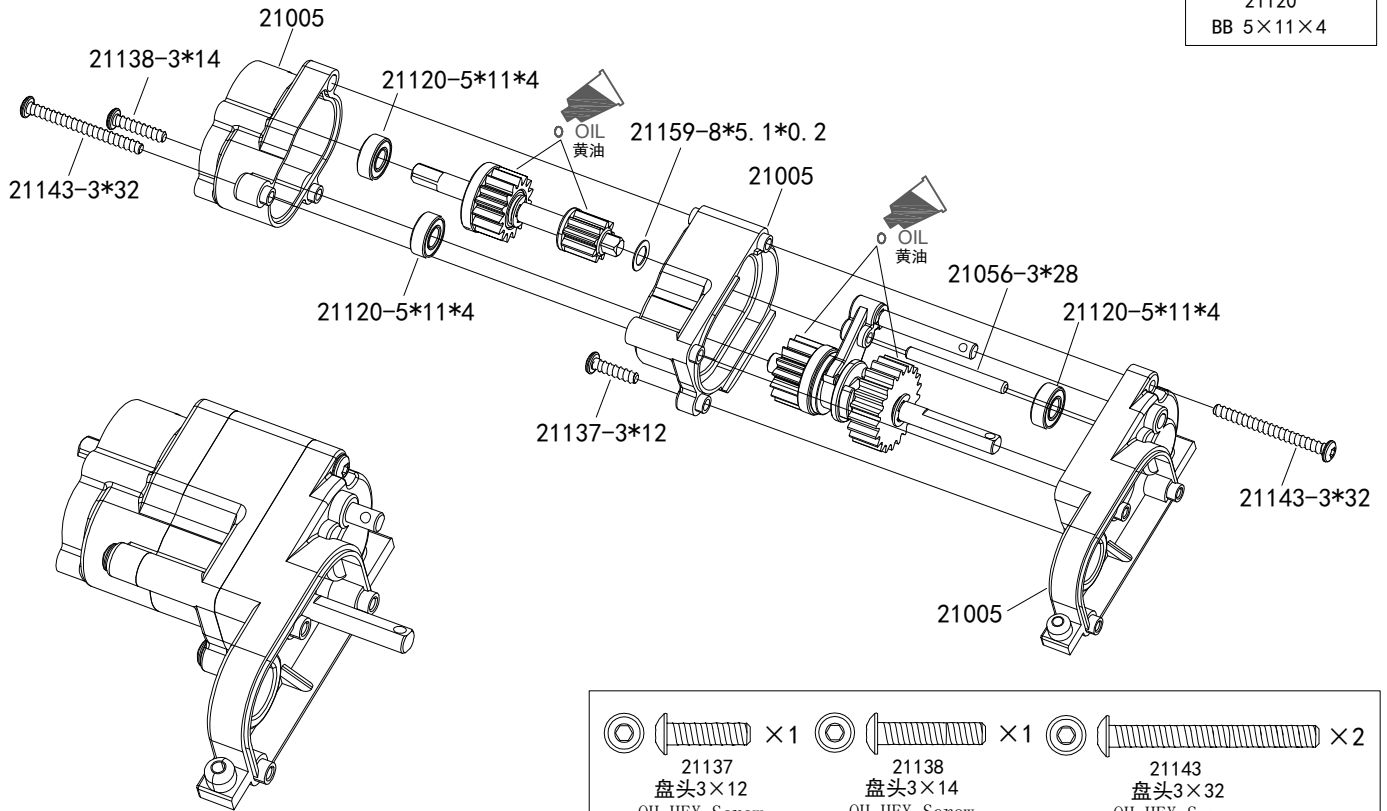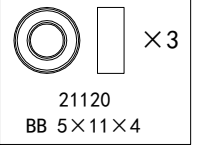




Gearbox Assembly

  波箱组装

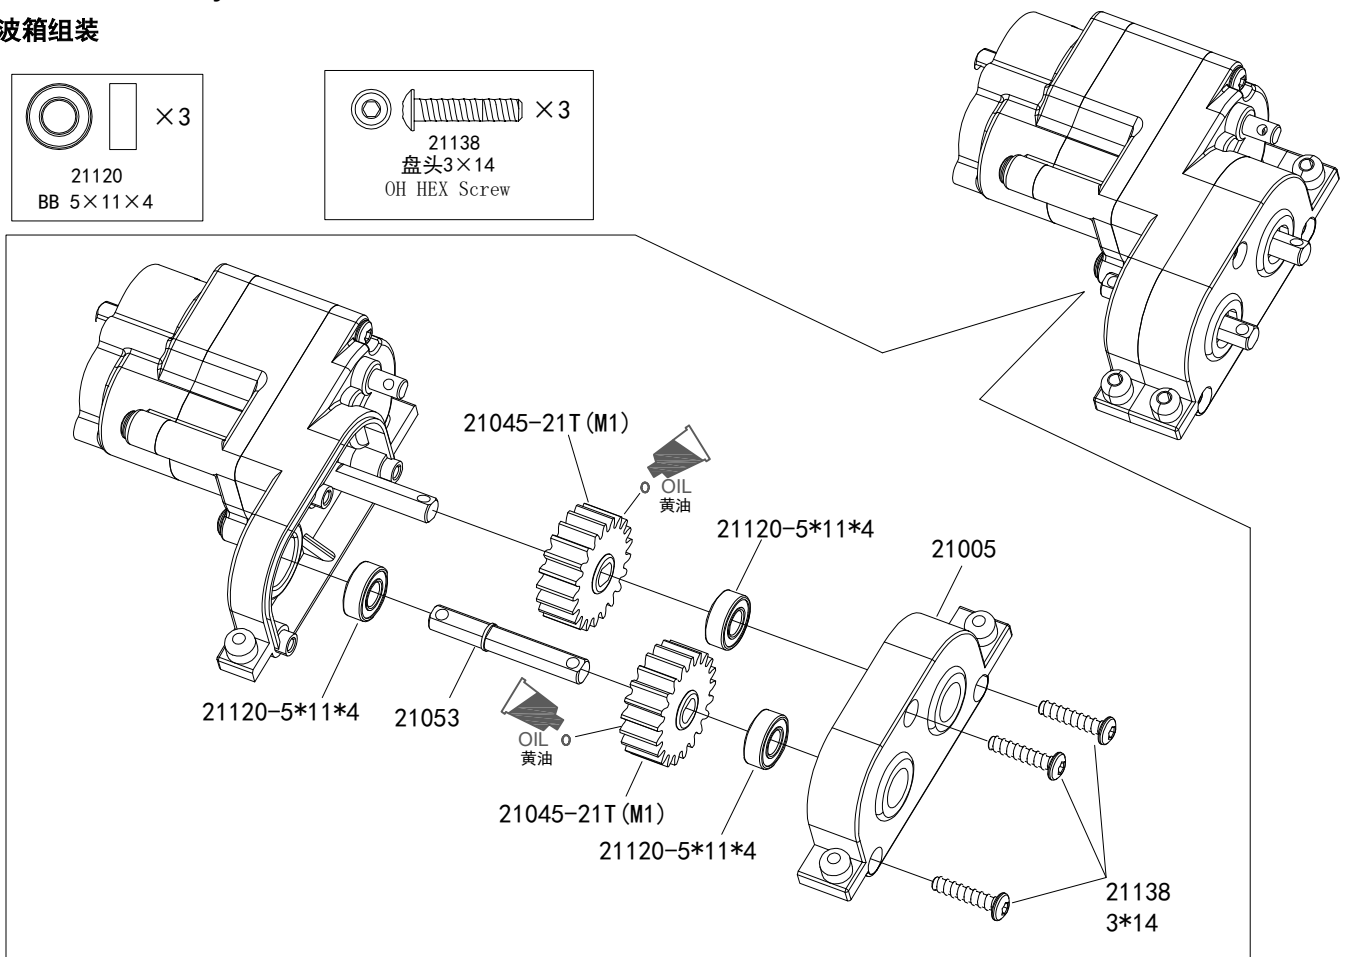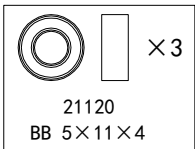




Gearbox Assembly

   波箱组装

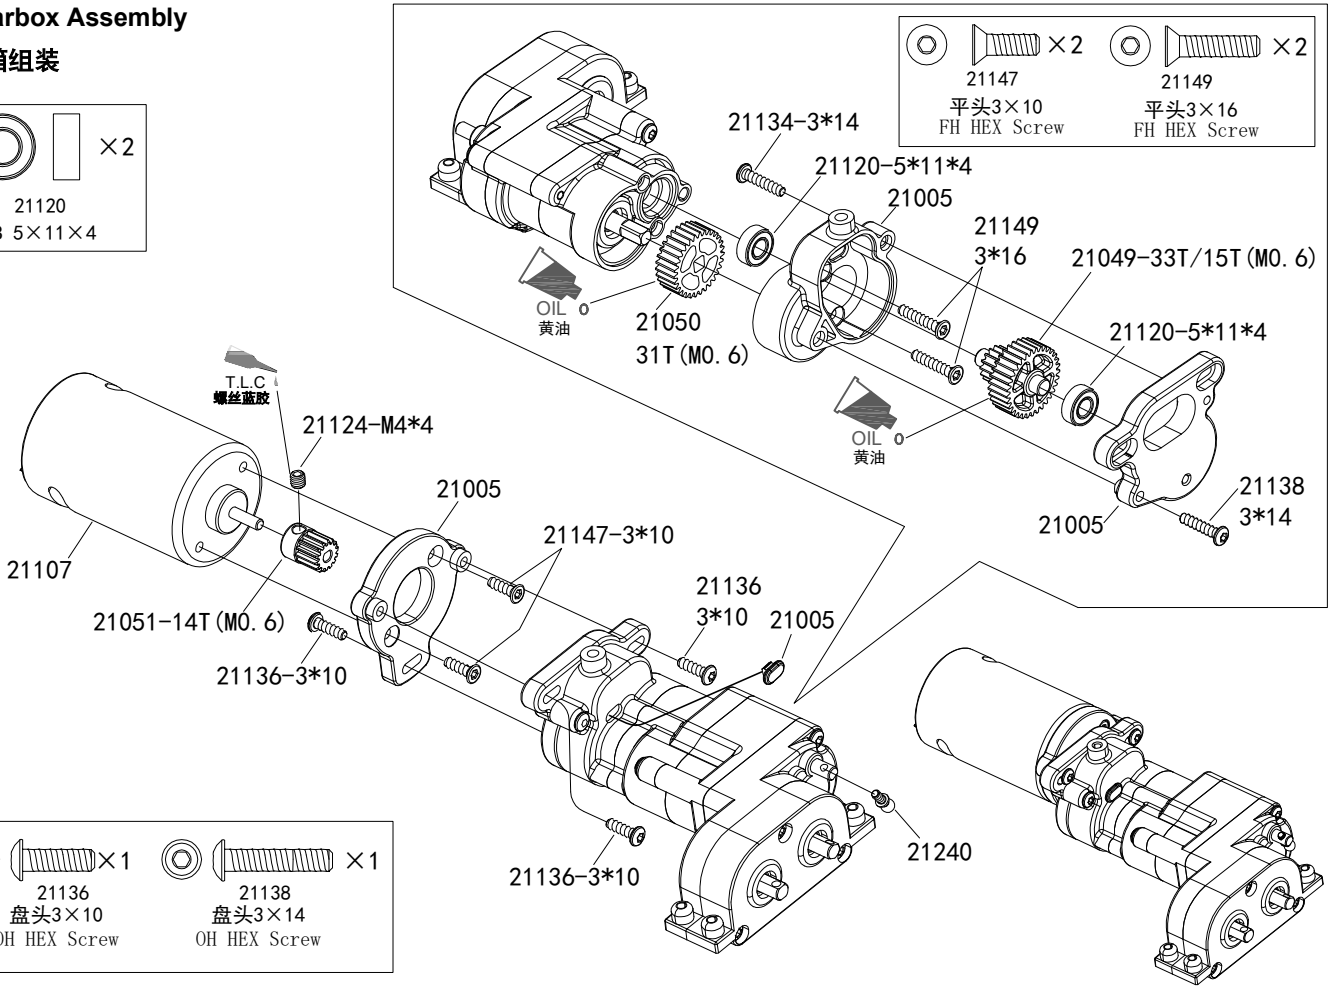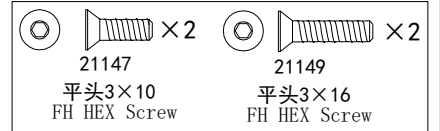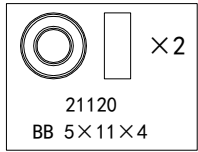


Chassis Assembly

   车架中段组装

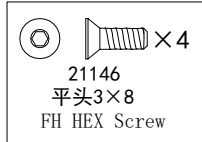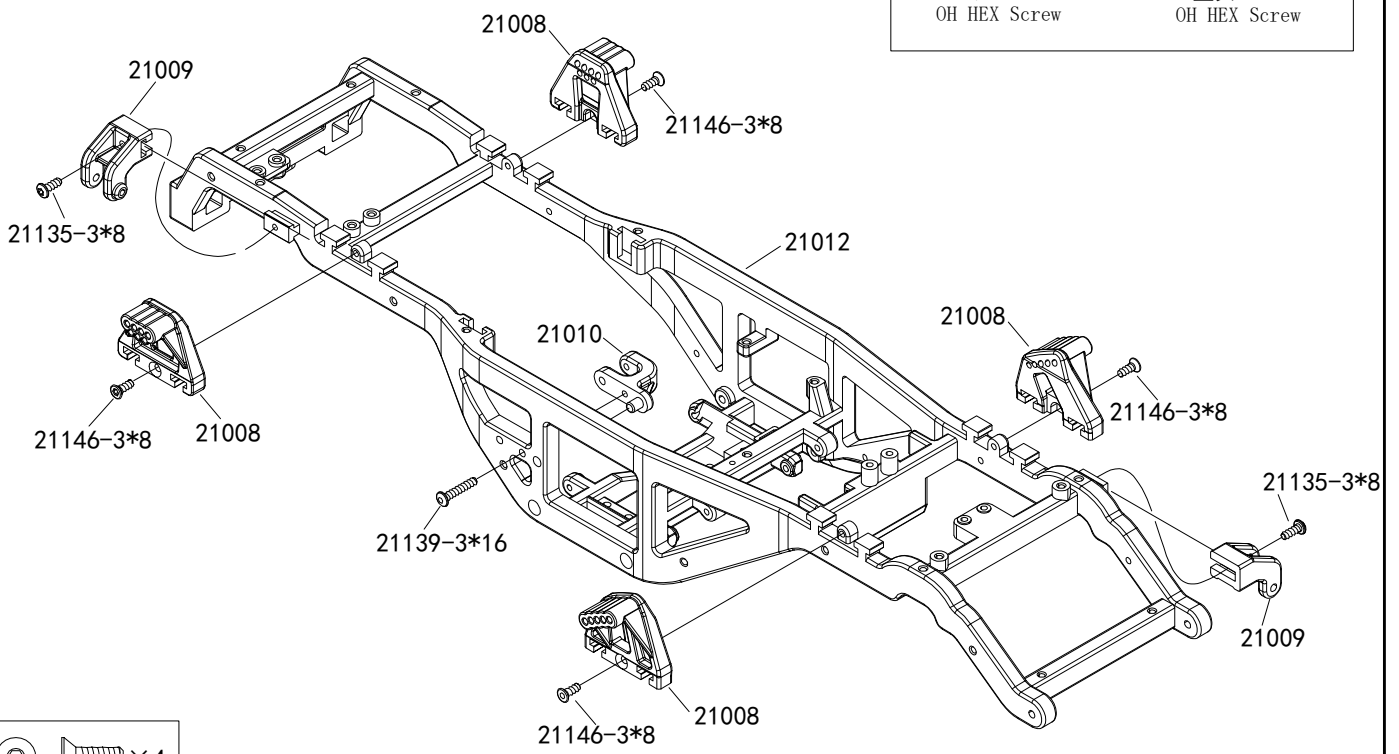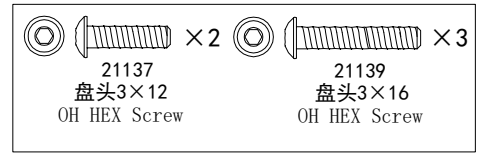

Chassis Assembly

 车架中段组装

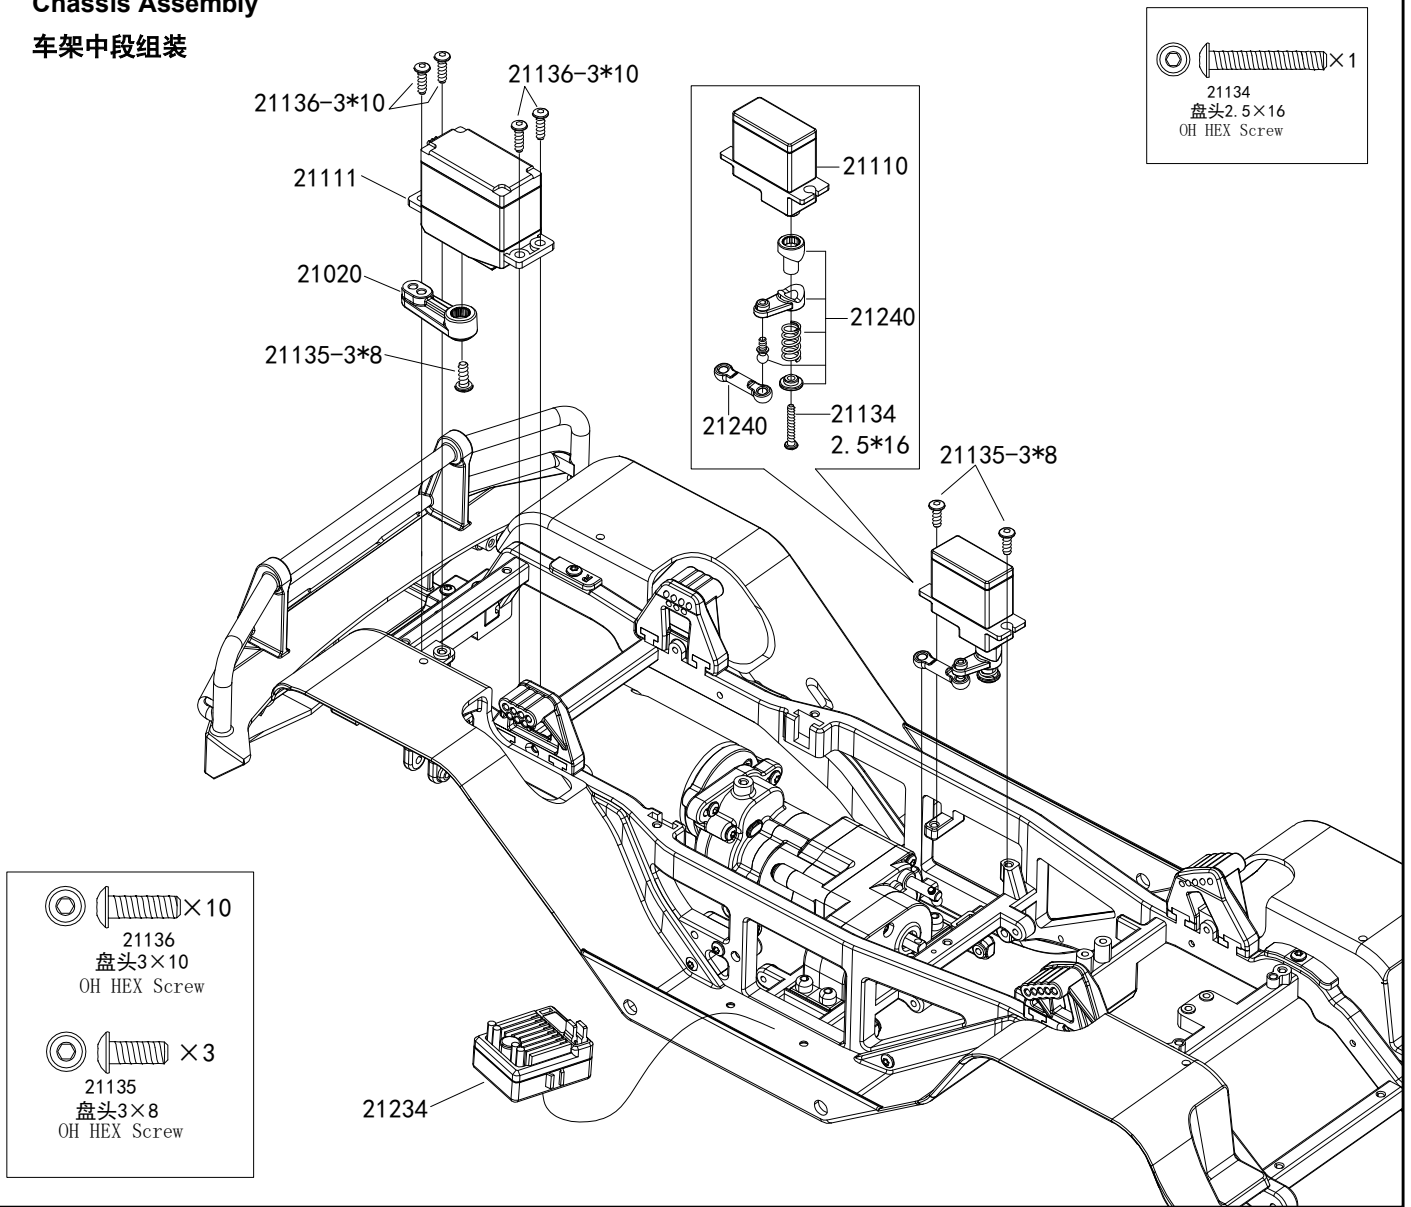


Battery box assembly

电池盒组装


如果使用更小体积电池, 可通过安装固定座, 来缩小小电池仓尺寸, 防止电池前后移动而损坏。

 Battery compartment can be adjusted by the mount to hold the short size battery in case your battery is damaged due to move back and forth.

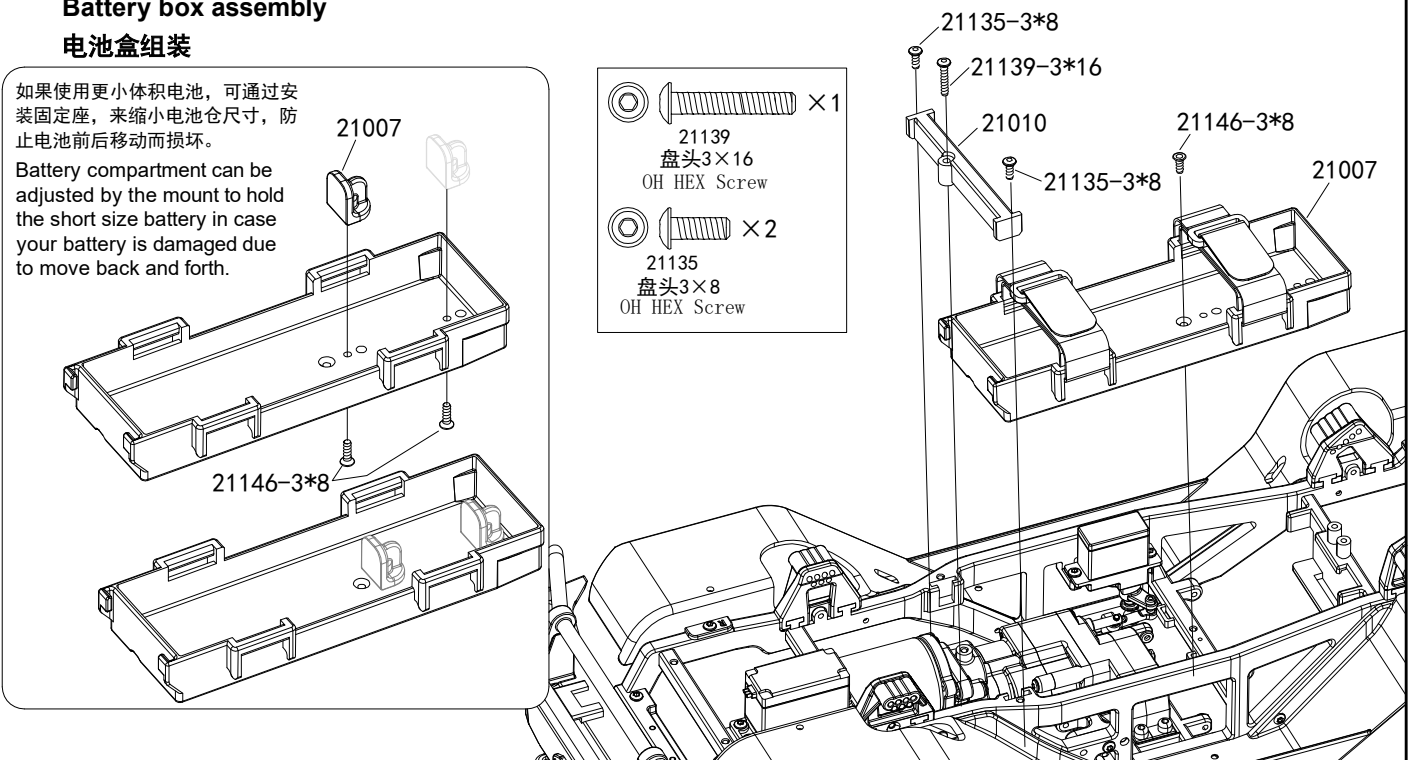


Chassis Assembly

 车架中段组装

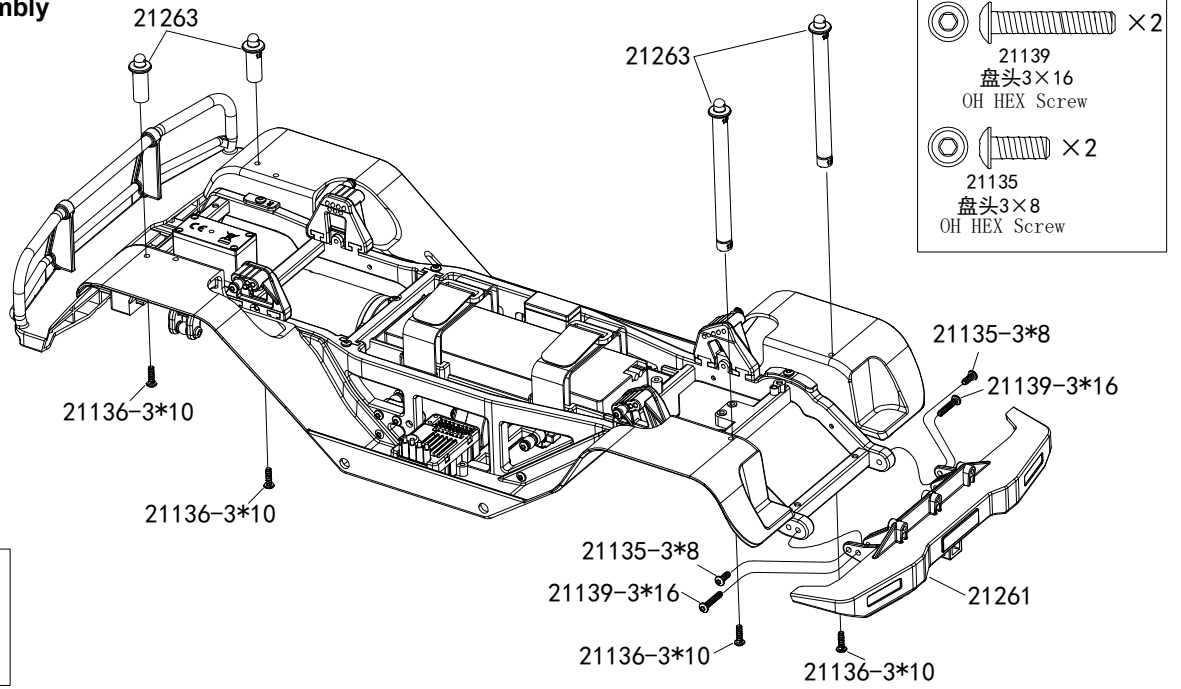


Tires Assembly

  轮胎组装

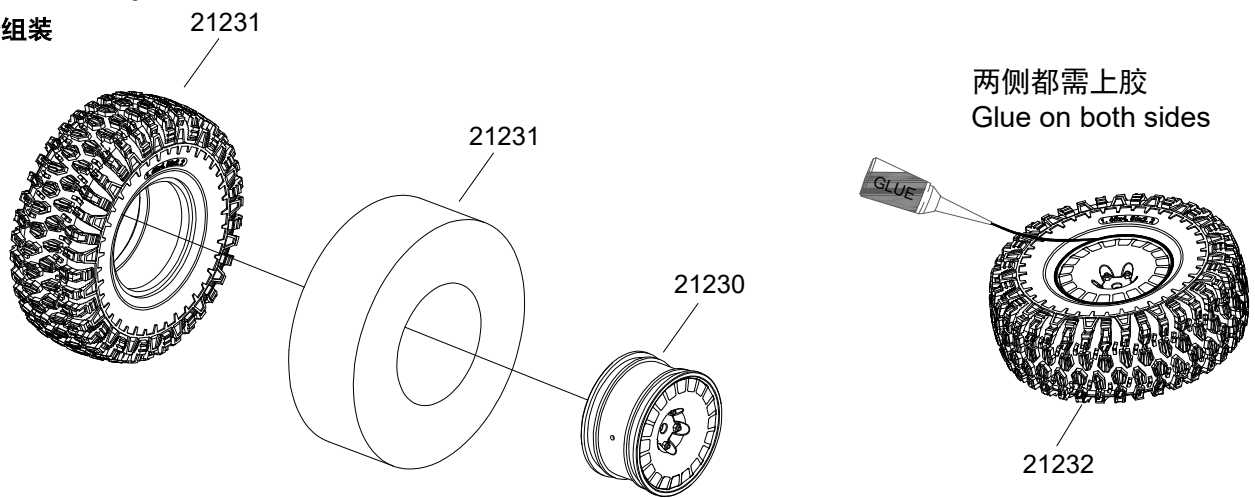


 
Body Assembly


车壳组装

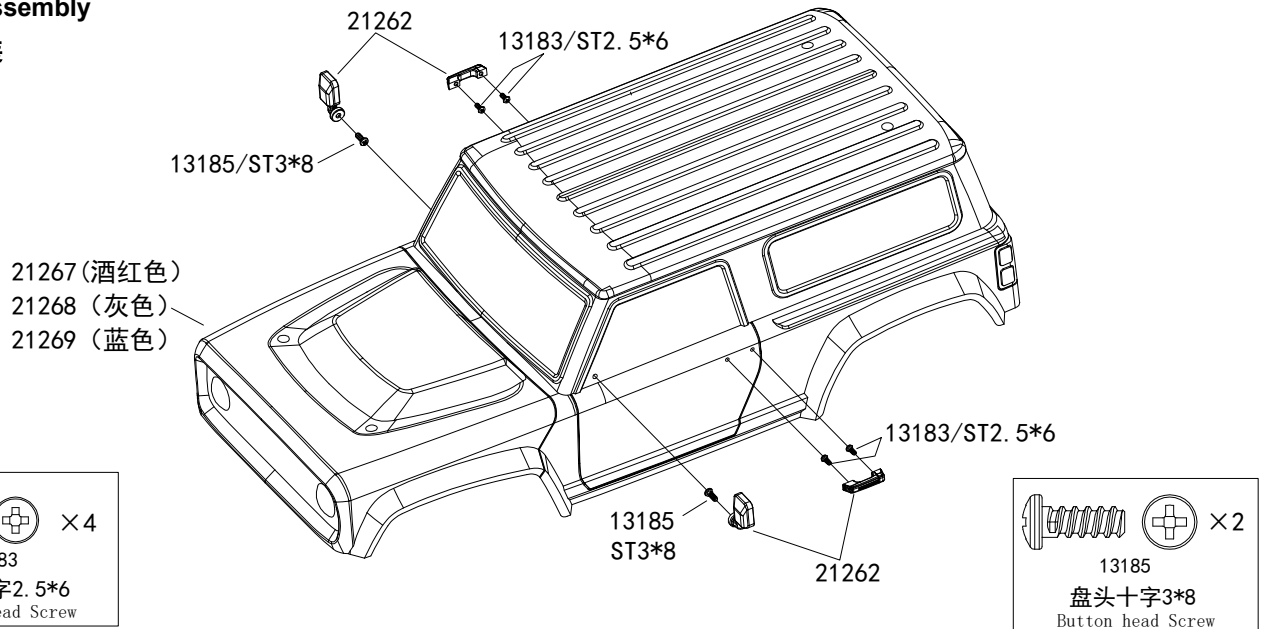


Vertical universal shaft assembly

纵万向轴组装 前/后


| | |
|---|---|
|  × 4 |  × 2 |
| 21164 Pin 2.0×11 | 21147 平头3×10 FH HEX Screw |

| |
|---|
|  × 2 |
| 21126 3×14 SET Screw |

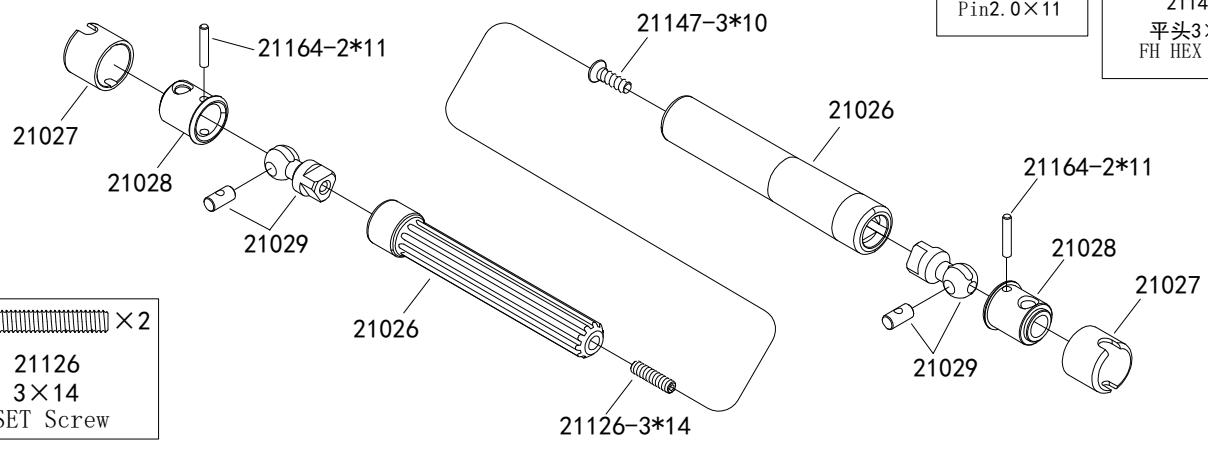 




Modular Assembly

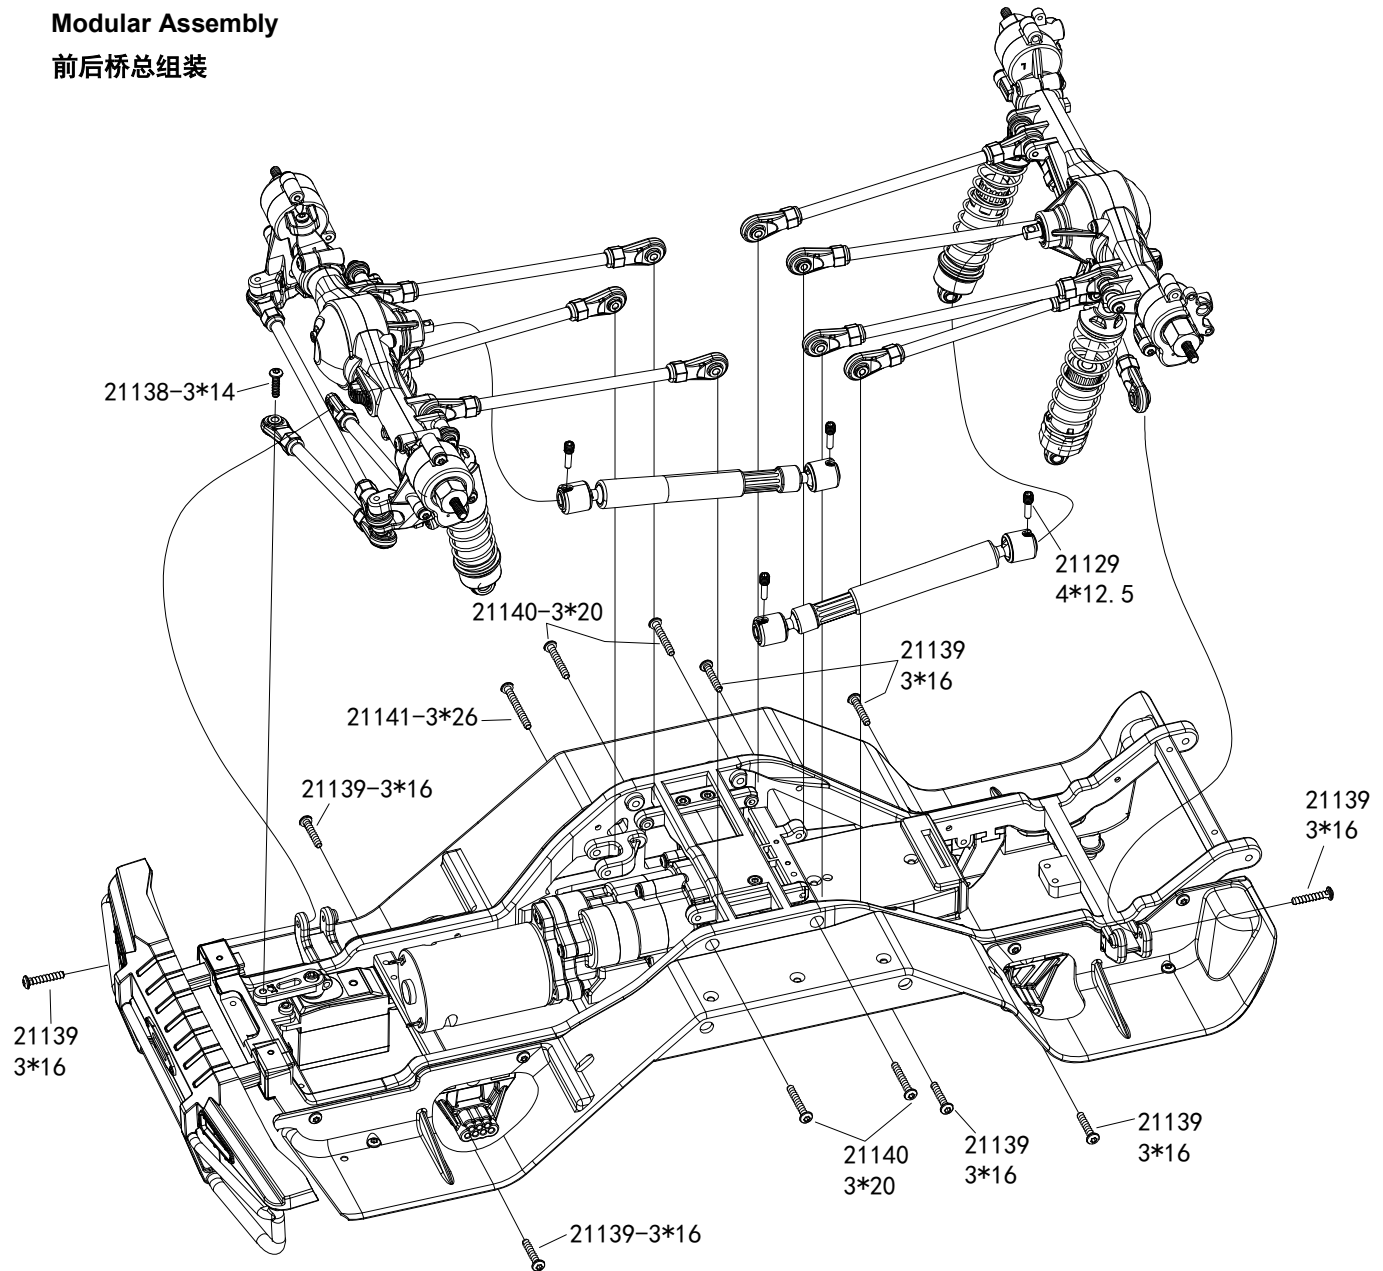 前后桥总组装





| |
|---|
|  × 1 |
| 21138 盘头3×14 OH HEX Screw |

| | | |
|---|--|---|
|  × 8 |  × 4 |  × 1 |
| 21139 盘头3×16 OH HEX Screw | 21140 盘头3×20 OH HEX Screw | 21141 盘头3×26 OH HEX Screw |


Tires Assembly

   轮胎安装

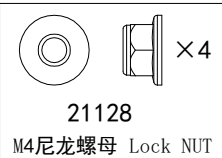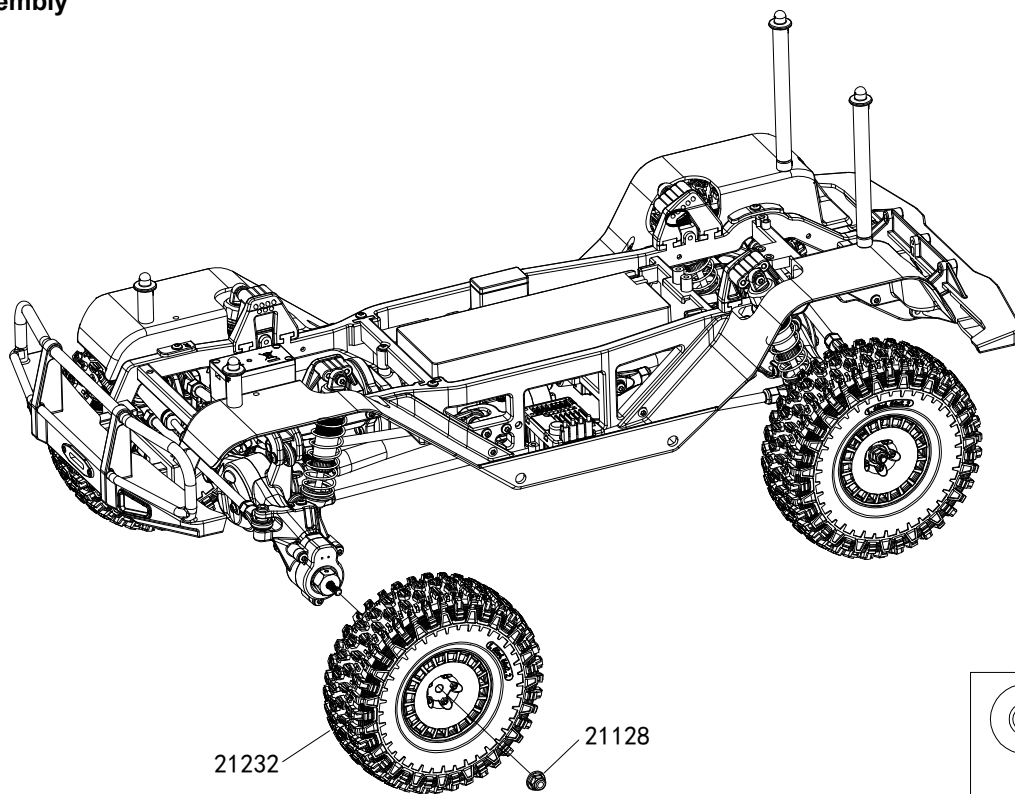
 


Body Assembly

车壳组装

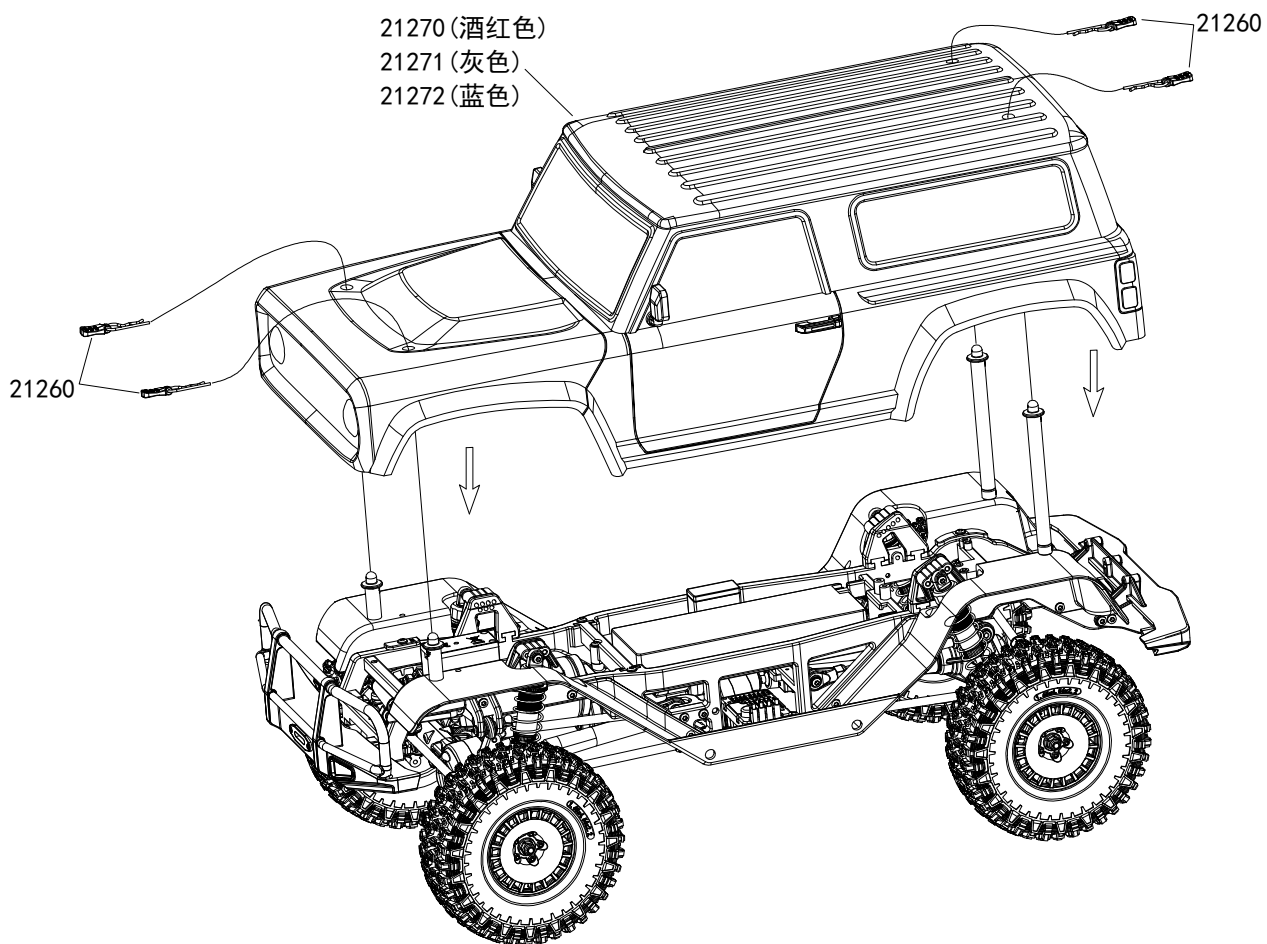


配件表 Parts List

| | | | |
|--|--|--|---|
| <p>21000</p>  <p>前桥管 Front Portal Housing</p> | <p>21001</p>  <p>后桥管 Rear Portal Housing</p> | <p>21002</p>  <p>C座 C Hub set</p> | <p>21003</p>  <p>转向座左/右 Spindle Lefts/Right</p> |
| <p>21004</p>  <p>后轮轴座 Rear Hub</p> | <p>21005</p>  <p>减速箱 Transmission Gearbox</p> | <p>21006</p>  <p>高/低速拨叉 Speed Conversion Paddles</p> | <p>21007</p>  <p>电池盒 Battery Case</p> |
| <p>21008</p>  <p>避震架 Shock Absorber Mount</p> | <p>21009</p>  <p>止推杆固定座 Panhard Bar Mount</p> | <p>21010</p>  <p>大梁支撑/固定座 Chassis Frame Support/Mount</p> | <p>21012</p>  <p>大梁 Chassis Frame</p> |
| <p>21013</p>  <p>左右侧板 Left and Right Guard Board</p> | <p>21020</p>  <p>转向伺服臂25T Steering Servo Horn 25T</p> | <p>21025</p>  <p>手动差速锁配件组 Hand Diff Lock Accessory set</p> | <p>21026</p>  <p>纵纵向轴 Plastic Vertical Universal Shaft</p> |
| <p>21027</p>  <p>纵纵向轴套 Center Universal Drive shaft Bushing</p> | <p>21028</p>  <p>纵纵向接杯 Center Universal Drive Cup</p> | <p>21029</p>  <p>纵纵向接头 Center Universal Joint Coupler</p> | <p>21031</p>  <p>差速壳 Differential Case</p> |
| <p>21032</p>  <p>差速齿轮组18T/13T Differential Gears</p> | <p>21033</p>  <p>从动齿轮34T 34T Gear</p> | <p>21034</p>  <p>差速器 Differential Set</p> | <p>21035</p>  <p>主动齿轮11T 11T Gear</p> |


配件表 Parts List

 21036




差速锁块
Differential Lock Mounting

 21040

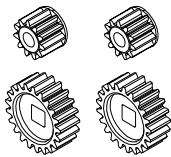


门桥齿轮11T/21T
Portal Axle Gears 11T/21T

 21041




输出轮轴-前
Front Portal Axle Output Shaft

 21042




输出轮轴-后
Rear Portal Axle Output Shaft

 21043

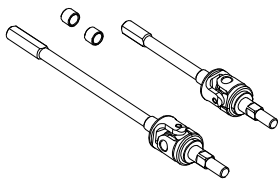


横万向传动轴
Horizontal Universal Shaft

 21044

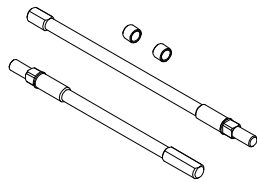

后直轴
Rear Straight Axle Shaft

 21045



波箱齿轮21T-M1.0 (扁孔)
Gearbox 21T Gear

21046




波箱齿轮21T-M1.0 (圆孔)
Gearbox 21T Gear

21047




波箱齿轮15T-M1.0
Gearbox 15T Gear

 21048




波箱齿轮9T-M1.0
Gearbox 9T Gear

 21049




波箱齿轮33T/15T-M0.6
Gearbox 33T/15T Gear

 21050




波箱齿轮31T-M0.6
Gearbox 31T Gear

 21051




马达齿14T-M0.6
14T pinion Gear

 21052




高低速换挡锁块
Speed Conversion Lock Block

 21053




波箱输出轴
Gearbox Output Shaft

 21054

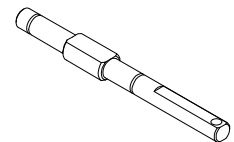


波箱变速轴
Gearbox speed shift shaft

 21055

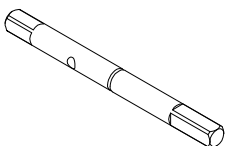


波箱二级减速轴
Gearbox Secondary Reduction Shaft

 21056



波箱销子3*28
Pins for Gearbox 3*28

 21084



止推杆-90mm
Sway Bar

21087



 
转向拉杆-109mm
Steering Linkage

21088




伺服拉杆
Servo Linkage

21107

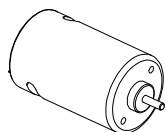


550碳刷马达
Brushed Motor

 21110

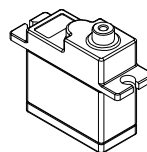

17G舵机
Servo

 21111

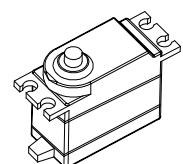

15KG舵机
Servo

 
配件表 Parts List

21112




拉杆球头座组
Ball Linkage Ends

21116

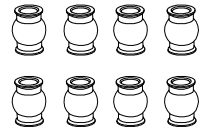


球头5.8-7.4
Hollow Steel Pivot Balls 5.8-7.4

 21117

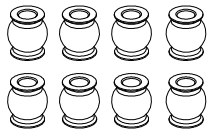


球头6.8-7.4
Hollow Steel Pivot Balls 6.8-7.4

 21118

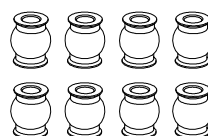

球头6.8-7.9
Hollow Steel Pivot Balls 6.8-7.9

 21119

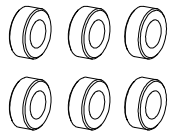


轴承5*10*4
Ball Bearing

21120



轴承5*11*4
Ball Bearing

 21121

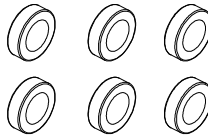


轴承6*12*4
Ball Bearing

21122




轴承12*18*4
Ball Bearing

 21123

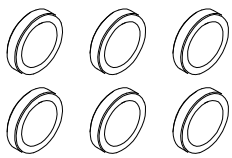


轴承15*21*4
Ball Bearing

 21124

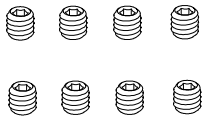

机米4*4
Headless Screws

 21125

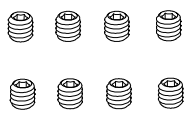


机米3*3
Headless Screws

21126



机米3*14
Headless Screws

 21127

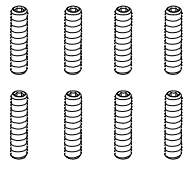

机米3*20
Headless Screws

21128



M4法兰螺母
Flange Lock Nuts

21129



螺丝轴M4-12.5
Screw Axle

21131




盘头内六角螺丝M2*6
Button Head Screws

21132




盘头内六角螺丝M2.5*8
Button Head Screws

 21133

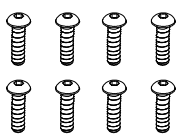

盘头内六角螺丝M2.5*10
Button Head Screws

 21134

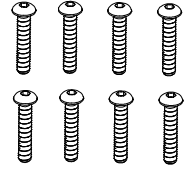


盘头内六角螺丝M2.5*16
Button Head Screws

21135




盘头内六角螺丝M3*8
Button Head Screws

 21136

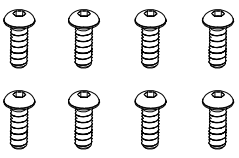


盘头内六角螺丝M3*10
Button Head Screws

 21137

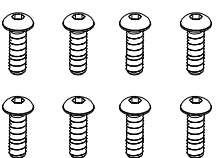


盘头内六角螺丝M3*12
Button Head Screws

 21138

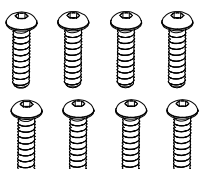

盘头内六角螺丝M3*14
Button Head Screws

 
21139

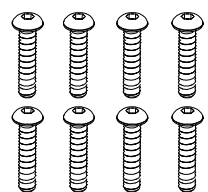

盘头内六角螺丝M3*16
Button Head Screws


配件表 Parts List

 21140




盘头内六角螺丝M3*20
Button Head Screws

 21141




盘头内六角螺丝M3*26
Button Head Screws

 21142

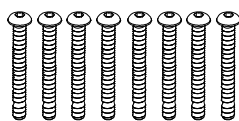


盘头内六角螺丝M3*28
Button Head Screws

 21143

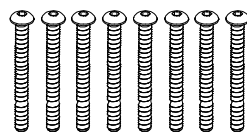


盘头内六角螺丝M3*32
Button Head Screws

 21144

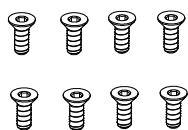


平头内六角螺丝M2.5*6
Flat Head Screws

 21145

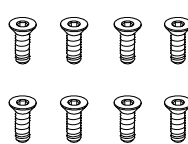


平头内六角螺丝M2.5*8
Flat Head Screws

 21146

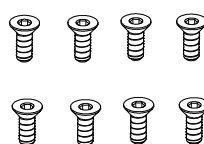


平头内六角螺丝M3*8
Flat Head Screws

 21147

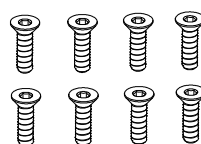


平头内六角螺丝M3*10
Flat Head Screws

 21148

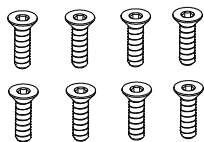


平头内六角螺丝M3*12
Flat Head Screws

 21149

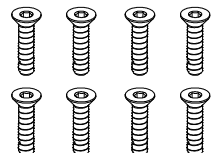


平头内六角螺丝M3*16
Flat Head Screws

 21159

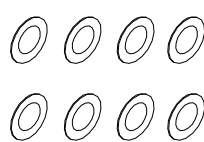


垫片8*5.1*0.2
Shims

 21160

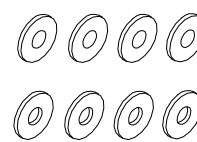


垫片8*3.1*0.5
Shims

 21162

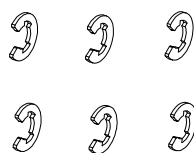


4. OE扣
E Clip

 21163

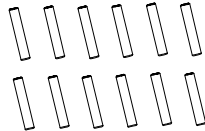


2*10销子
Pins

 21164

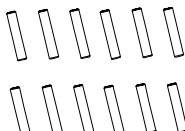


2*11销子
Pins

 21166

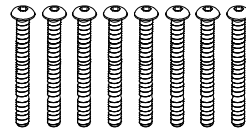


盘头内六角螺丝M3*30
Button Head Screws

 21230




轮框
Gray Rims

 21231

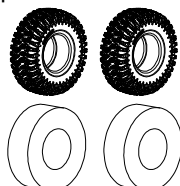


轮胎皮/海绵
Tires/Foams

 21232

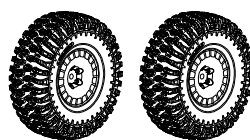


轮胎组
Wheels

 21233

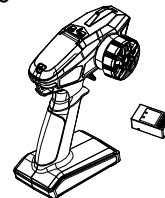


遥控/接收机
Transmitter/Receiver

 21234




电调60A
ESC 60A

 21240

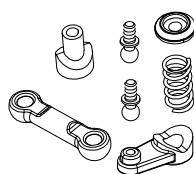


高低速伺服臂组
High-Low Speed Servo Horn

 21244

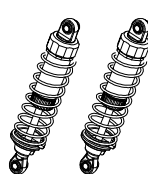



















避震器组
Shock Set Complete

 
21245



   避震盖
shock cap

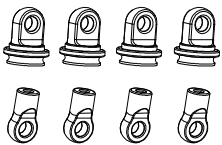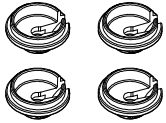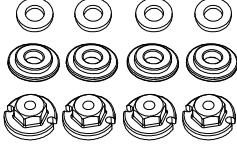配件表 Parts List
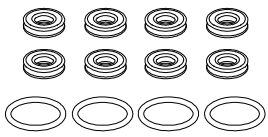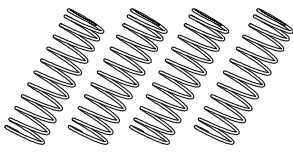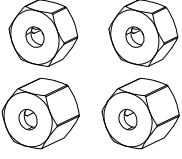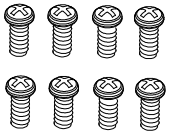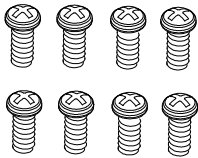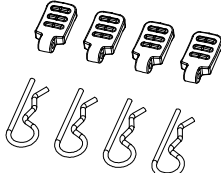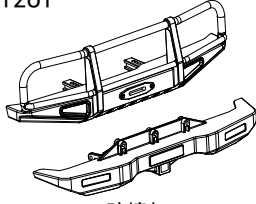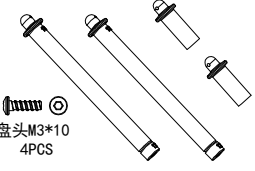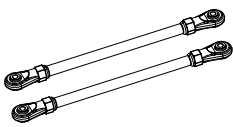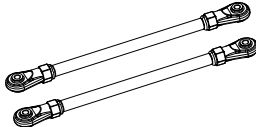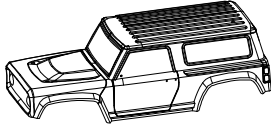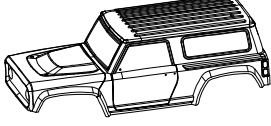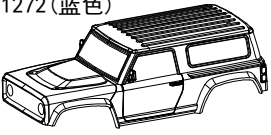             
| | | | |
|--|---|---|--|
| <p>21246</p>  <p>避震球头座 Shock absorber ball head seat</p> | <p>21247</p>  <p>避震弹簧下座 Shock Rod End and Spring Cups</p> | <p>21248</p>  <p>避震活塞 Shock Piston</p> | <p>21249</p>  <p>避震筒 shock body</p> |
| <p>21250</p>  <p>避震轴 Shock Shaft Set</p> | <p>21251</p>  <p>避震X圈 Shock X-Ring</p> | <p>21252</p>  <p>避震弹簧 Shock Spring Set</p> | <p>21253</p>  <p>六角轮座 Wheel Hex</p> |
| <p>13183</p>  <p>盘头十字自攻牙螺丝ST2.5*6 Button head Self-tapping screws</p> | <p>13185</p>  <p>盘头十字自攻牙螺丝ST3*8 Button head Self-tapping screws</p> | <p>21260</p>  <p>车壳安装配件 clips, body post</p> | <p>21261</p>  <p>防撞架 Bumper</p> |
| <p>21262</p>  <p>盘头ST3*8 2PCS 盘头ST2.5*6 4PCS 车壳配件组 Body accessories</p> | <p>21263</p>  <p>盘头M3*10 4PCS 车壳柱 body post</p> | <p>21264</p>  <p>上拉杆-68mm Camber Link</p> | <p>21265</p>  <p>下拉杆-81mm Linkage upper</p> |
| <p>21266</p>  <p>车壳 (透明) Body (Clear)</p> | <p>21267 (酒红色) 21268 (灰色) 21269 (蓝色)</p>  <p>车壳 (丝印) Body (Screened)</p> | <p>21270 (酒红色) 21271 (灰色) 21272 (蓝色)</p>  <p>车壳组 Body set</p> | |
| | | | |

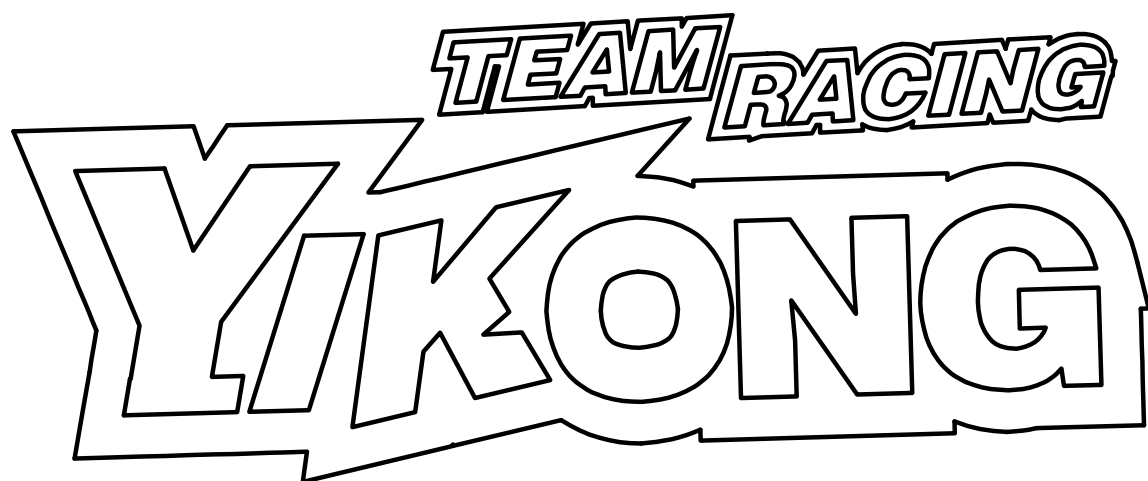 

Website: www.yikong.racing